

Wexiödisk^W

COMBI-DISHWASHER WD-12S


ESP 1.5

(original documentation)



Read the manual before using the machine!

Installation and user manual

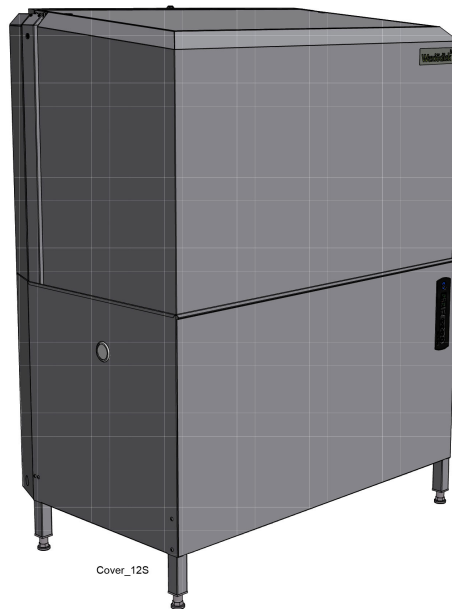

1. General instructions	1
1.1 Symbols used	2
1.2 Machine rating	3
1.3 Checking that the machine and manual correspond	3
1.4 EU Declaration of Conformity	4
2. Safety instructions	5
2.1 General information	5
2.2 Transport	6
2.3 Installation	6
2.4 Detergent and drying agent	6
2.5 Operation	7
2.5.1 High temperatures	7
2.5.2 Risk of crushing	7
2.5.3 Risk of slipping	7
2.5.4 Sounds	7
2.6 Cleaning the machine	7
3. Installation instructions	8
3.1 General information	8
3.1.1 Rust on industrial dishwashers	9
3.2 Requirements for the installation site	10
3.2.1 Lighting	10
3.2.2 Ventilation and ambient temperature	10
3.2.3 Power supply	10
3.2.4 Water	10
3.2.5 Drain/waste pipe	10
3.2.6 Space for servicing	10
3.3 Transport and storage	11
3.3.1 Unpacking	12
3.4 Installation	14
3.4.1 Preparing for the installation	14
3.4.2 Positioning the machine	14
3.5 Connections	15
3.5.1 Electrical connection	16
3.5.2 Water connection, regardless of any options	16
3.5.3 Drain/waste pipe	17
3.5.4 Ventilation	17
3.5.5 Detergent and drying agent (possible option)	18
3.5.6 Bleeding the booster pump	19
3.5.7 Bleeding the hood lifting cylinder	20
3.5.8 Adjusting the hood pressure switch	21

3.6 Installation and connection of auxiliary equipment and options	22
3.6.1 ECO flow (condensing unit)	22
3.6.2 Cold water-connected machine	22
3.6.3 Basket conveyor with foldable grid sections (WD206.5371 & WD206.5372)	22
3.6.4 Grid basket	23
3.6.5 Drain pump	23
3.6.6 Marine design	23
3.6.7 Active filter	23
3.6.8 Adaptation for WD-PRM 6/7	24
3.6.9 Reduced opening height	25
3.6.10 Autostart	25
3.6.11 Hot water filling for demi water rinsing	25
3.6.12 Conveyors and roller conveyors	26
3.7 Trial operation	27
3.7.1 Start-up schedule	27
3.8 Documentation	28
4. Operating instructions	29
4.1 Before washing	30
4.1.1 Machine design	30
4.1.2 Preparations before filling	32
4.1.3 Filling and heating the machine	32
4.2 Washing	33
4.2.1 Positioning of dishware in baskets	33
4.2.2 Programme selection – Normal load (-)/Heavily soiled load (+)	37
4.2.3 Changing the washing temperature and washing time	39
4.2.4 Washing	41
4.2.5 Checking the wash result	44
4.2.6 Changing the water	45
4.3 After use – Cleaning	47
4.3.1 Incorrect cleaning methods	47
4.3.2 Emptying, internal machine rinsing	48
4.3.3 Daily cleaning	52
4.3.4 Cleaning each week or as required	53
4.3.5 Operating problems	54
5. Technical specifications	58

1. General instructions

Read the instructions in this manual carefully as they contain important information regarding the correct, effective and safe installation, use and servicing of the machine. Service personnel should have access to all documentation for the machine.

Keep this manual in a safe place so that it can and should be used by other operators of the machine.



- The machine is intended to be used for washing dishware that is found in the general catering and restaurant trade. Other uses are NOT recommended!
- The machine can be equipped with a number of different options. Certain options may be standard in a number of countries. Check what your machine is equipped with.
- Use auxiliary equipment where possible to avoid heavy lifting.
- The machine's display indicates what the machine is doing. The machine's various temperatures and any alarms are also shown.
- The capacity requirements of the machine can be found in the TECHNICAL DATA chapter.
- The electronics in the machine are RoHS compatible.

Before the machine is started up and used, the following points should be observed:



- The SAFETY INSTRUCTIONS chapter must be studied carefully before commissioning the machine.
- Installation of the machine must be performed in accordance with the requirements and instructions indicated in the INSTALLATION INSTRUCTIONS and TECHNICAL SPECIFICATIONS chapters.
- Any personnel who may at some point use the machine must be trained in its operation, use and care.
- The machine should not be used by anyone suffering from a physical or mental illness.
- A close eye should be kept on any children in the vicinity of the machine to ensure they do not tamper with it.
- All cover plates must be fitted during use.



The machine and equipment requires an annual service. Contact one of our authorised and trained service companies for such a service.

1.1 Symbols used



This symbol warns of situations where a safety risk may arise. The instructions given should be followed in order to prevent injury and dangerous situations.



This symbol on a machine part warns of electrical equipment. The machine must be entirely non-live during servicing, turn off the power at the power switch and if required, the switch should be locked to prevent unintentional operation. The component may only be removed by a qualified electrician. You must also remember to switch off the power supply to any external equipment which has a separate supply (e.g. detergent equipment).



This symbol warns that the machine's electronics are sensitive to electrostatic discharge (ESD), which is why a static electricity wristband must be used when handling the electronics at all times.



This symbol explains the right way to perform a task in order to prevent poor results and/or damage to the machine.



This symbol identifies recommendations and hints to help you get the best results when washing, to increase the machine's lifespan and reduce the risk of emergency shutdown.



This symbol explains the importance of careful and regular cleaning of the machine to meet hygiene requirements.



This symbol warns of the importance to read the manual before using the machine.



This symbol warns that local regulations must be followed for recycling of packaging etc. as well as the destruction of the machine.



This symbol shows where any earth cable for potential equalisation can be connected. The earth bolt is placed on the machine's stand.

1.2 Machine rating

The machine has two rating plates, one of which is placed at the bottom of one side of the machine and the other in the electrical cabinet. The technical information on the plates is also included on the machine's wiring diagram. The various rating fields show:



1. Machine type
2. Machine serial number
3. Year of manufacture
4. Enclosure protection class
5. Voltage
6. Number of phases with or without neutral
7. Frequency
8. Main fuse
9. Motor output
10. Electrical heating output
11. Max. output
12. QR code

1.3 Checking that the machine and manual correspond

Check that the type description on the rating plate corresponds with the type description on manual cover page. If manuals are missing, it is possible to order new ones from the manufacturer or the local distributor. When ordering new manuals, it is important to quote the machine number found on the rating plate.

1.4 EU Declaration of Conformity

A so-called EU Declaration of Conformity is provided on delivery of the machine.

Wexiödisk

CE DECLARATION OF CONFORMITY

This declaration of conformity only refers to the machine/product in the condition in which it is supplied, not any additions or modifications made by the customer/user.

1. Manufacturer: Wexiödisk AB, Mårdvägen 4 S, 352 45 Växjö, Sweden
Tel: +46 (0)470 77 12 00, Fax: +46 (0)470 237 52, E-mail: wexiodisk@wexiodisk.com

2. Representative: Bohus General Trading, Lee Kyung Group Ltd, DSP Co., Electronics Service OOO, Farus ehf, IZB, Martin Food Equipment Ltd, Moffitt Pty Ltd, M's Alswar's Consolidates Pvt Ltd, Nakashiki Mfg Co Ltd, QMB corporation, Retail doo, SRS Hyaleni Hurditan, TFN Group, Wexiödisk AB, Wexiödisk UK

3. Compiler of technical documentation: Magnus Ericson

4. Our machines are manufactured **2016** in accordance with applicable EU directives and we declare under sole responsibility that the following products:

5. CE Declaration of Conformity:
EU's Machinery Directive 2006/42/EC, annex II A
EU's Low-voltage directive 2006/95/EC
EU's EMC-directive 2014/53/EU
EU's WEEE directive 2002/96/CE
EU's RoHS-directive 2011/65/EU

6. Harmonised standards:
EN 12100 Machine safety: General principles for design - Risk assessment and risk reduction
EN 50105 Safety - Particular rules for active tests
EN 60205 Specification for degree of protection provided by enclosure (IP code)
EN 5233 Measurement methods for electromagnetic fields of household appliances and similar apparatus with regard to human exposure
EN 55014-2 Electromagnetic compatibility (EMC) - Immunity standard for industrial environments
EN 55014-1 Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus (EMC) - Part 1: Emission
EN 50181 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

7. The above directives and standards are common to the different machine groups.
Standards in the tables below are specific to the different machine groups.

Machine group	Harmonised standards to: EU's Machinery Directive 2006/42/EC, annex II A
Single family, portable, turnable machines with accessories: WD-400 (111000-1) WD-7000 (111000-1) & WD-75 (111000-1) WD-60 (111000-1) WD-7000000 (111000-1) WD-10 & WD-1000000 (111000-1) & WD-5500000 & WD-5500000 (111000-1) & WD-2100 & WD-2100 (111000-1) WD-7000000 (111000-1) WD-1000 (111000-1) WD-1000 (111000-1) WD-1000 (111000-1)	EN 00015-1 Safety of household and similar appliances - Design and light fit EN 00015-2-50 Safety of household and similar appliances - Design and light fit EN 00015-2-50 Safety of household and similar appliances - Design and light fit
Commercial, special machines: WD-1000 & WD-1000 (111000-1) & WD-1000 & WD-1000 (111000-1) WD-1000 & WD-1000 (111000-1) & WD-1000 & WD-1000 (111000-1) WD-1000 & WD-1000 (111000-1) & WD-1000 & WD-1000 (111000-1)	EN 00024-1 Machine safety - Technical specifications of machines - Design and light fit
Special machines: ACS 40000000 (111000-1)	EN 00024-1 Machine safety - Technical specifications of machines - Design and light fit

8. Växjö 2016-04-20
Magnus Ericson
Managing Director

CE_16_2

1. Contact details of the manufacturer (Wexiödisk AB, Mårdvägen 4, SE-35245 Växjö, SWEDEN, Tel.: +46 470 771200, E-mail: wexiodisk@wexiodisk.com).
2. Representatives of Wexiödisk AB.
3. Person responsible for the product's documentation.
4. Year of manufacture of the product.
5. The EU Directives with applicable provisions to which all the machines, special machines and accessories comply.
6. Harmonised standards for the Directives specified, and which the machines, special machines and accessories meet, wherever relevant.
7. Model designation and serial number of the machines, special machines and accessories the document applies to.
8. Place and date with signature and name (in block letters) of the person responsible for ensuring compliance with legislation and regulations.

2. Safety instructions



Read the chapter GENERAL INSTRUCTIONS carefully before starting work.

2.1 General information



The machine is CE marked, which means that it complies with the requirements of the EU Machinery Directive with regard to product safety. Product safety means that the design of the machine will prevent personal injury or damage to property. The CE mark is only valid for an unmodified machine. Any damage to the machine arising from failure to follow the instructions will invalidate the supplier's warranty and product liability.



Installation, repairs and servicing must be performed by an authorised engineer in accordance with local and national rules in effect for such work with water and drainage systems, electricity, ventilation and steam. To ensure electrical safety, components must only be tested when installed in their normal place in the machine. We recommend that the work is performed by the manufacturer or one of the manufacturer's authorised service companies.

To further improve safety during installation, operation and servicing, the operator and the personnel responsible for installing and servicing the machine should read the safety instructions carefully.



The machine's electronics are sensitive to electrostatic discharge (ESD), which is why a static electricity wristband must be used when handling the electronics at all times.

Before the machine enters service, ensure that the personnel are given the necessary training in handling and looking after the machine.

In order to avoid dangerous situations, the following must be followed:



- Switch off the machine immediately in the event of failure or malfunction.
- If the connection cable is damaged, it must be replaced by an equivalent type according to specification. The work must be carried out by authorized personnel. Make sure the machine is non-live before removing the cover plate. Turn off the power using the power switch. If required, the switch must be locked to prevent unintentional operation. You must also remember to switch off the power supply to any external equipment which has a separate supply (e.g. detergent equipment).
- Shut off the tap for incoming water and drain the machine's tank(s) before starting work. Let the machine cool down as pipes for water, washing pumps, booster heaters and valves become very hot when the machine is in operation.
- The machine and equipment requires an annual service. The machine should be serviced by a person authorised or trained to do so by us. Use original spare parts.
- Warranty repairs must be performed by an authorised company. Contact an authorised service company to draw up a programme of preventive care and maintenance. For authorised service companies, please see www.wexiodisk.com or contact Wexiödisk AB.
- The regular checks described in the manual must be carried out in accordance with the instructions.

2.2 Transport



Handle the machine with care during unloading and transport; there is a risk of it tipping over. Never lift or move the machine without using the wooden packaging to support the stand.

2.3 Installation



- The machine is designed for quick electrical installation.
- The machine must be connected to a lockable power switch.
- Make sure that the mains voltage is the same as that indicated on the machine's rating plate.



For increased safety, it is recommended to equip the installation with a ground fault circuit breaker.

2.4 Detergent and drying agent



Be aware of the risks involved in handling detergents and drying agents. Protective gloves and safety glasses should be used when handling, and an eyebath should be within easy access. Read the warning text on the detergent and drying agent containers as well as the detergent supplier's instructions.

2.5 Operation



Be very careful around the machine when it is in operation.

2.5.1 High temperatures



- The temperature of the washing and rinsing water is 60 °C and 85 °C. Do not open the machine until the washing and rinsing phases have finished. The steam that comes out of the machine after the wash has been completed is hot.
- Avoid touching hot pipes and booster heaters. The machine's outer jacket can also become hot during operation.

2.5.2 Risk of crushing



The machine, and any equipment, has moving parts before, during and after washing. Be careful therefore to avoid crush injuries. In connection with service or repairs that require the hood to be open, it must be secured by means of a prop for example.

2.5.3 Risk of slipping



The floor should be kept clean and dry to eliminate any risk of slipping. Mop up any water and leftover food that has been spilt.

2.5.4 Sounds



The machine is not silent during operation, see TECHNICAL SPECIFICATIONS. Hearing protection may therefore need to be used.

2.6 Cleaning the machine



The water in the tank has a temperature of approximately 60 °C and contains detergent. Be careful when draining and cleaning the wash tank. Wear protective gloves and safety glasses and have an eyebath within easy access.

3. Installation instructions



Read the chapters GENERAL INSTRUCTIONS and SAFETY INSTRUCTIONS carefully before starting work.

3.1 General information



Read these instructions carefully, as they contain important information regarding the correct installation method.



- The instructions should be used together with the machine's wiring diagram located in the plastic folder behind the front panel of the machine.
- The machine can be equipped with a number of different options. Certain options may be standard in a number of countries. Check what your machine is equipped with.
- If holes need to be drilled in the machine, the holes must be fitted with an edge strip or similar protection.
- Software version 2.5 or later should be used to connect a WD-PRM 6 or WD-PRM 7 to a WD-12S. If you are using an earlier software version this should be updated. The level pipe in the dishwasher has been replaced with a bottom filter.

3.1.1 Rust on industrial dishwashers



- Large-scale industrial dishwashers in general as well as our dishwashers are made of stainless materials, but despite this, there are still situations where rust can occur on “stainless” materials.
- We are going to describe a few reasons for this here, so that you, as a user, service engineer or other type of personnel, can avoid this.
- Rust usually occurs due to the fact that something that is not stainless finds its way onto the stainless surface. The non-stainless particles will soon start to rust, and then contaminate the stainless material, which also starts to rust. If no action is taken at this point, serious damage such as a hole in the material can occur.

RISK SITUATION	CAUSE	DECLARATION / ACTION
Drilling holes when installing a detergent device.	Using a drill or hole saw that has previously been used for ordinary non-stainless materials.	“Contaminated” hole-drilling tools can cause enormous damage in the form of pores in stainless plates. Never use a cutting tool that has previously been used on other materials or blackplate.
	Using blunt tools when drilling holes.	Stainless plate, which has overheated during hole drilling, may lose its “stainless” properties. This can show up as rust around the hole for the detergent cell.
	Shavings from hole drilling.	The shavings from drilling or hole sawing are usually heated so much that they lose their stainless properties. They must always be removed by hand! Washing after hole drilling is not enough!
Rust spots that occur during normal operation and use.	Minerals, e.g. ferrous gravel or earth, from dishware or food (vegetables and root vegetables) that has been lying in crates, find their way onto the stainless surface. Minerals (gravel) can also be found on the wheels of catering trolleys.	Daily cleaning is always important. Use a suitable brush for “mechanical” cleaning, e.g. in the wash tanks, on the wash trays and filters.
	Steel wool. Ordinary steel wool is not stainless, and can cause serious damage to stainless surfaces and plates.	Use stainless cleaning pads. Remove all ordinary steel wool from the catering facility / restaurant.

NOTE! If rust spots have developed, they must be dealt with immediately by a person authorised to do so!

3.2 Requirements for the installation site

3.2.1 Lighting

In order to ensure the best possible working conditions during installation, operation, servicing and maintenance, make sure that the machine is installed in a well-lit room.

3.2.2 Ventilation and ambient temperature

The machine is intended to be used in an indoor environment at normal room temperature. The machine produces heat and steam when in operation. In order to ensure the best possible working conditions, a certain air renewal rate is required in the dishwashing room. The ventilation requirements for the dishwashing room are to be dimensioned on the basis of the applicable standards.



The machine may optionally have a heat recovery unit connected to an exhaust fan to reduce the amount of steam released.

3.2.3 Power supply

Power supply connections are made by qualified personnel in a way that complies with local and national regulations. The machine's capacity requirements are stipulated in TECHNICAL SPECIFICATIONS.

3.2.4 Water

Water connections are made by qualified personnel in a way that complies with local and national regulations. The machine's capacity requirements are stipulated in TECHNICAL SPECIFICATIONS.

3.2.5 Drain/waste pipe

There must be a waste pipe with an effective trap for the machine's waste water and for water used for rinse cleaning. The machine's capacity requirements for drainage are stipulated in TECHNICAL SPECIFICATIONS.

3.2.6 Space for servicing


A 1-metre area should be left clear in front of the machine for servicing purposes. Depending on if the machine has different accessories, there may also be such a requirement at the infeed and outfeed ends of the machine.

3.3 Transport and storage

Always transport the machine in an upright position.



Take care during transport, as there is a risk of tipping. NOTE! The machine must not be transported without a pallet or other support. Some form of support beam must always be used along the sides of the machine during transport. Otherwise the machine may become damaged. When transporting the machine without a normal wooden pallet, always check that none of the components underneath the machine can be damaged.

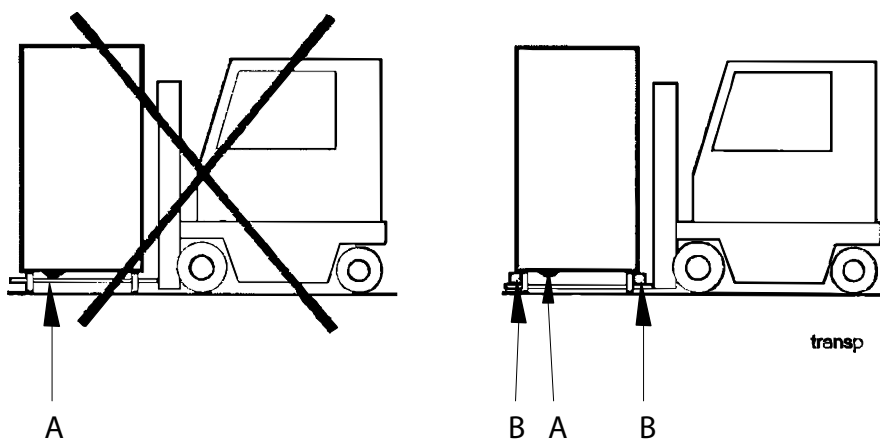

A=Pumps
B=Spacers



If the machine is not being installed immediately, it must be stored in a frost-free area where the air is dry.

3.3.1 Unpacking


Check that all parts have been delivered by comparing them with the delivery note.

Standard machine



1. Remove the plastic tape, cover and cardboard.
2. If possible, lift using a (pallet) truck. Unscrew the adjustable feet so that they extend below the pallet's floor level.
3. Unscrew the two outer screws from the side boards and remove them.
4. If the consignment has been lifted using a (pallet) truck, lower the forks fully and drive the truck out.
5. Pull out the pallet.

Machines with drain pump fitted

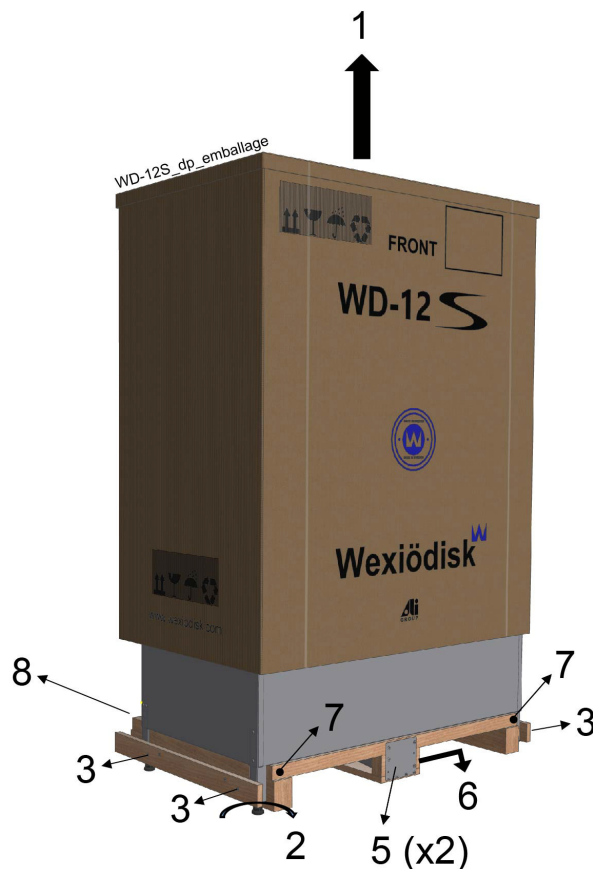

1. Remove the plastic tape, cover and cardboard.
2. If possible, lift using a (pallet) truck. Unscrew the adjustable feet so that they extend below the pallet's floor level.
3. Unscrew the two outer screws from the side boards and remove them.
4. If the consignment has been lifted using a (pallet) truck, lower the forks fully and drive the truck out.
5. Screw off the metal plates (x2) in the middle of both sides of the pallet.
6. Remove the boards (which extend under the machine) previously secured by the metal plates.
7. Unscrew the oblique screws on the longitudinal board on the opposite side to the side on which you want to pull out the pallet.
8. Remove the board that was held in position by the oblique screws.
9. Pull out the pallet.

Recycling



- The machine is manufactured from stainless steel plate, among other things, and also contains electronic components. Recycling of the appliance when its economic lifetime has been reached must be carried out in accordance with current rules and regulations.
- Packaging must be sent for destruction or recycling in accordance with local regulations.

3.4 Installation

3.4.1 Preparing for the installation

Check that there is sufficient room for the machine at the installation location.



- Check that correct connections are available for water, electricity, drainage and possibly steam at the installation location. See TECHNICAL SPECIFICATIONS.
- Check that the overheating protection device is reset.


3.4.2 Positioning the machine

Check the following points before the machine is placed in position:



- Check that the fuse for the machine at the site is off, blocked and that outgoing electrical circuits from the machine are non-live.
- Remove the protective plastic on the sides which are to be stood against a wall.
- The distance between the wall and machine should be at least 20 mm.
- If the machine is to be corner-loaded, it must be positioned with the control panel furthest away from the wall.


Put the machine in position and check that the machine and any accessories are horizontal using a spirit level. Place the spirit level on the join between the machine tank and the upper part. Adjust the height with the legs.

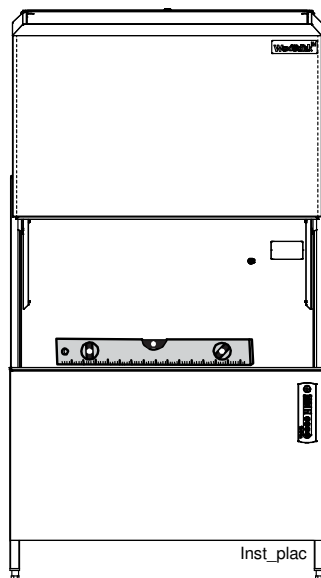

Check with a spirit level that the machine is horizontal

Once the machine has been filled with water, do another check to make sure the machine is horizontal.

3.5 Connections

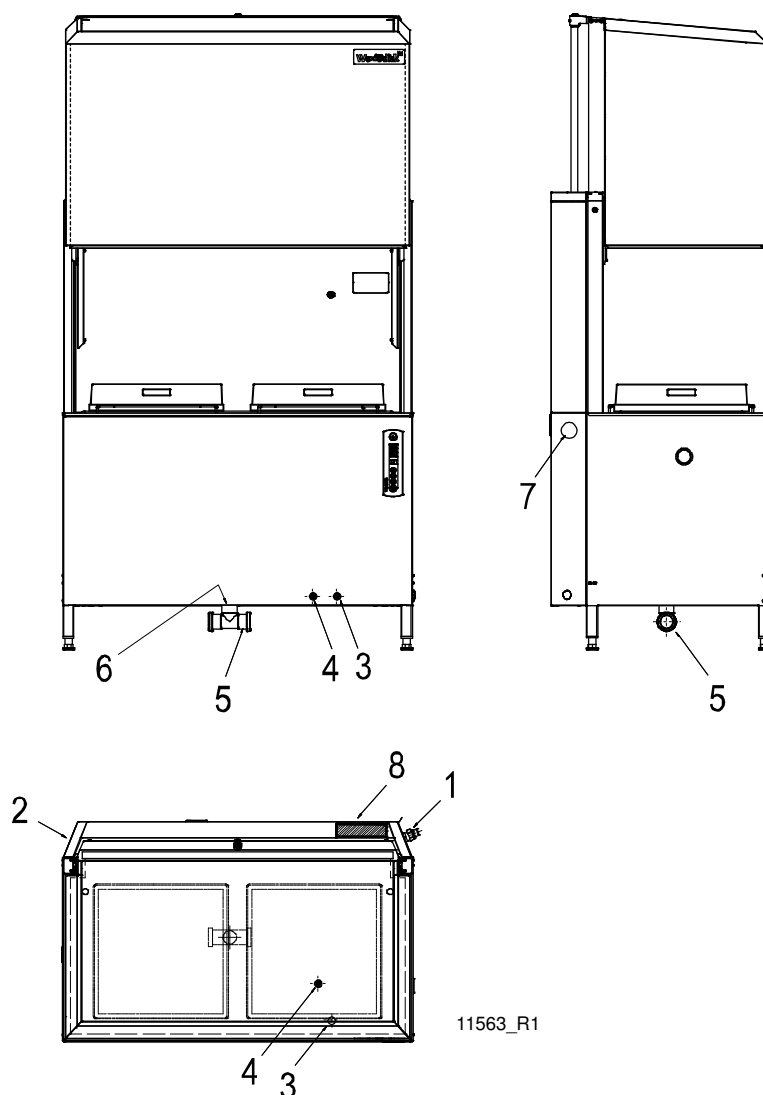

1. Electrical connection
2. Alternative electrical connection
3. Standard machine: Hot water connection
Machines with ECO flow (option): Cold water connection
4. Machines with ECO flow (option): Hot water connection
5. Drain/waste pipe connection
6. Drain pump (option)
7. Plugged hole for detergent connection
8. Exhaust air ECO flow (option)

In the following chapter, figures are given in brackets to clarify what needs to be done. These numbers refer to image and list above.

3.5.1 Electrical connection

Information about electrical connections is available on the machine's wiring diagram which is provided on delivery. Store the diagrams in the plastic pocket, located in the electrical cabinet, even after installation.



- The machine is designed for quick electrical installation.
- The machine must be connected to a lockable power switch. This should be placed on a wall, well-protected from water and from the steam which escapes when the machine is opened. The machine is supplied with the electrical cable connected (1 or 2).

After completing the installation, switch on the power switch and all circuit breakers.

3.5.2 Water connection, regardless of any options



- A shut-off cock must be installed on the incoming pipe.
- It is important that the water supply has sufficient pressure to ensure the correct flow of water to the machine. The required water flow and pressure can be found in the TECHNICAL SPECIFICATIONS.
- The machine is fitted with a "Break Tank", which is equipped with a filter and non-return valve.

The water pipe is connected to (3) on a standard machine.

Machine equipped with a heat recovery unit (option)



The cold water is connected to (3) and the hot water to (4) if the machine is equipped with ECO flow (option).

3.5.3 Drain/waste pipe


The waste water system connected to (5) should consist of a 50 mm metal pipe that will withstand mechanical impacts. The waste pipe must run to a floor drain, where its opening must be above the water level.

Ensure that the drain connection is kept in place by using e.g. cable ties in the designated areas.

Machines with a drain pump (option)



NOTE! The drain connection must be connected above the tank's water level in the machine.

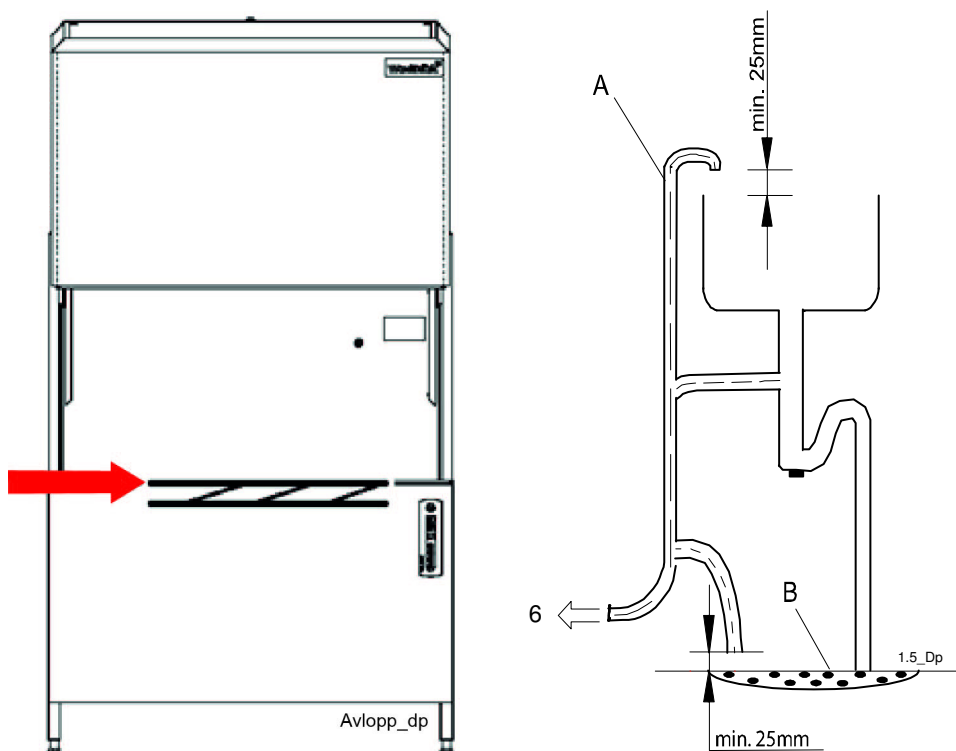

Drain hose (A) consists of a spiral hose which is connected to the machine's drain pump (6) and to the drain (B) as desired.

Machines connected to WD-PRM 6/7 (option)



See also "Installation and user manual" for WD-PRM 6/7.

3.5.4 Ventilation

The machine's heat load for the room is stipulated in TECHNICAL SPECIFICATIONS.

3.5.5 Detergent and drying agent (possible option)



NOTE! For the potential-free outputs KA9-KA15, the spark-guard sits on the electronic card to protect the relay contactors in case of inductive loads. This spark-guard can generate a small leakage current even if the relay is not activated. If you connect equipment to a high impedance input on any of the contactors J71-J74, this current can affect the operation of the equipment. See also the wiring diagram for the machine.



- Check what your machine is equipped with, as this may vary depending on market. The equipment will be roughly set at the factory if the machine is equipped with any of these alternatives. Contact your chemical supplier for a more precise setting.
- Use the same make and type of detergent and drying agent.
- With machines connected to cold water, the water pipe temperature may be too low for use of powder or paste type detergents.
- If liquid detergent is used together with Wexiödisk's detergent pump, the detergent must be placed under the machine's tank level.
- The positioning of the drying agent is not as critical, but it should be placed in the same way as the detergent.

If equipment for a different type of detergent is used, it should preferably be put on the wall behind the machine to avoid holes being drilled unnecessarily in the machine.



Detergent hose connections on both sides of the tank

When drilling holes, it is important that the following points should be observed:

- Use sharp tools so that panels do not become unnecessary hot. Red-hot panels can rust in the future.
- Always drill from inside the machine.
- Remove all metal shavings carefully both from the machine and tank before refilling with water. Shavings left in the tank can cause corrosion.

The measuring cell for measuring the concentration of detergent in the washing water is located on the left-hand side of the tank (viewed from the front) and hole markings for drilling are shown.


For information about electrical connections, see the wiring diagram.

The process of setting the detergent and drying agent dispenser is described in the ADJUSTMENT INSTRUCTIONS.

3.5.6 Bleeding the booster pump




The pump housing must be filled with water before starting the booster pump for the first time. Once the break tank has been filled with water, the booster pump is bled by slackening the bleed screw on the top right-hand side of the pump housing. This may be accessed via the plastic plug on the right-hand side of the machine. The booster pump is located on the removable booster heater kit.

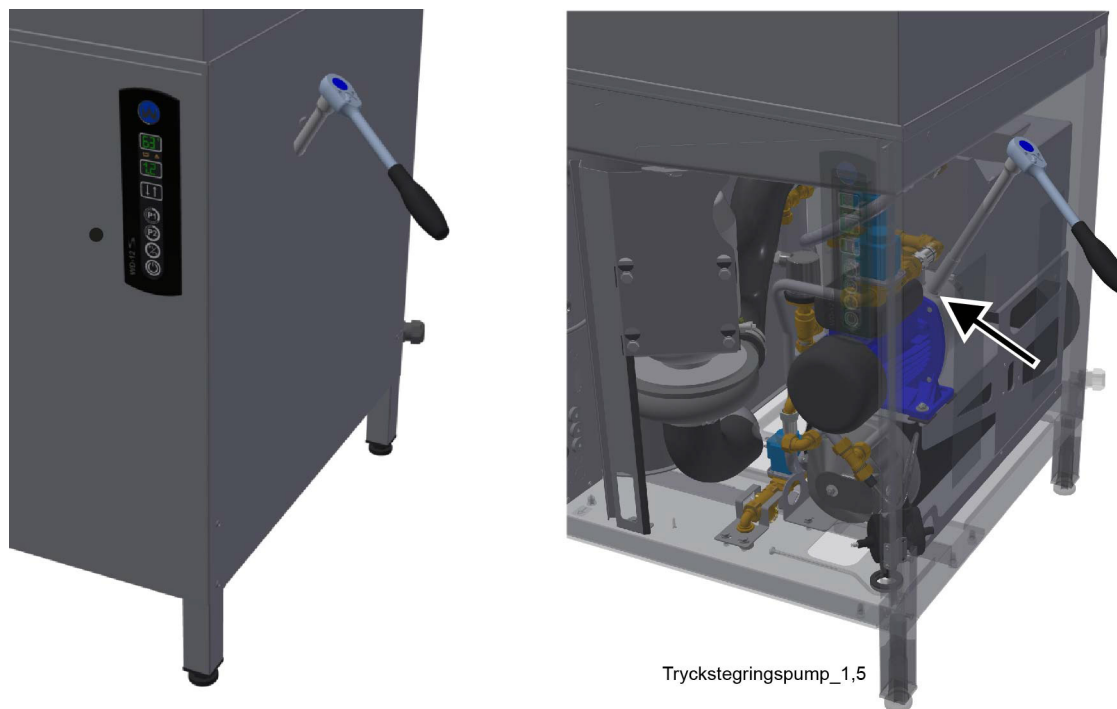

Booster heater bleed screw


3.5.7 Bleeding the hood lifting cylinder

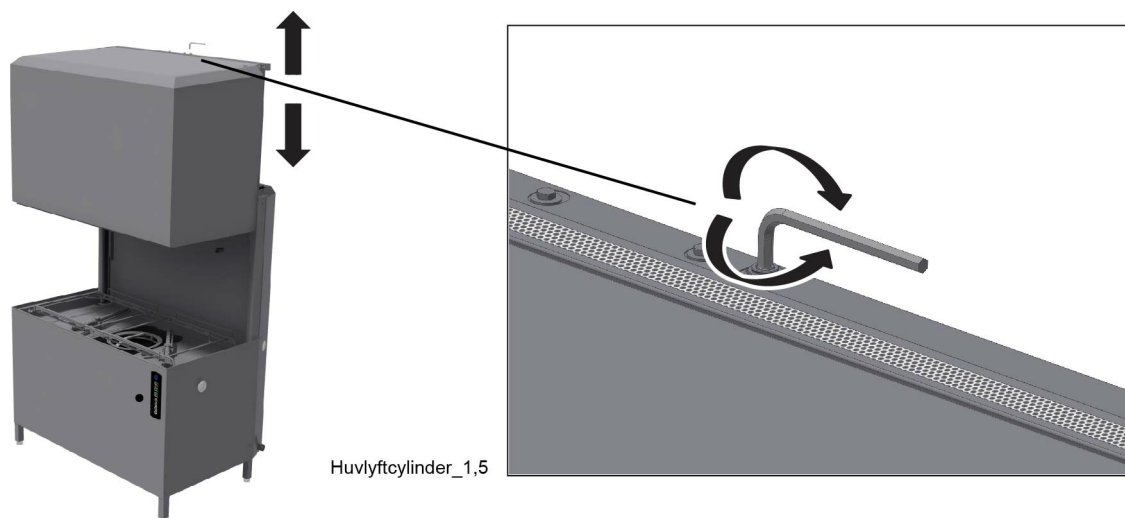

Hood lifting cylinder bleed screw, located above back edge of hood

1. Close the hood.
2. Unscrew the bleed screw a couple of turns.
3. Push the hood up and down until only water (N.B.! Not air) comes from the cylinder.
4. Tighten the bleed screw.
5. Wipe away any waste water from the hood lifting switch located inside the hood near the bleed screw.

3.5.8 Adjusting the hood pressure switch

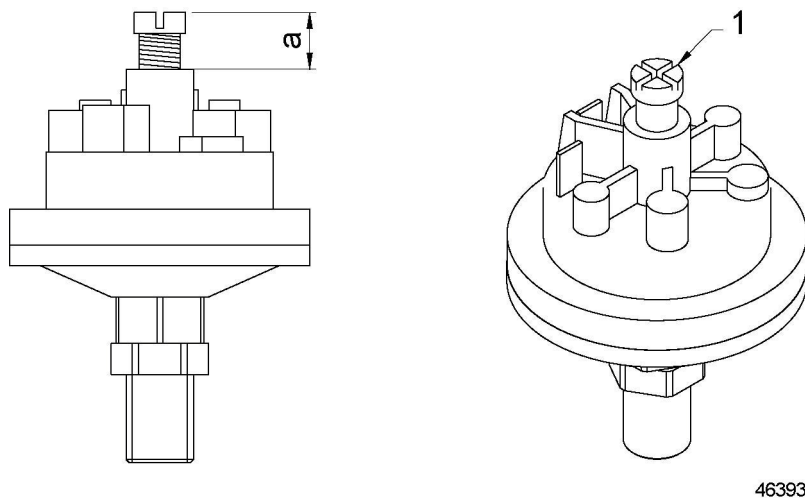

Hood function should be checked before beginning installation of the pressure switch. The hood should open and close with a smooth movement.

It is important that the machine is evenly balanced for optimal operation of the hood.

Run the machine through one wash so that water reaches the sliding surface of the hood. This will mean that hood function should now operate normally.

Adjusting the pressure switch:

1. Unscrew the adjuster screw on the pressure switch (1) to length a, approximately 10-11mm.
2. Push the hood down to around 10cm above the edge of the tank, and use your hand (in the middle of the hood) to hold it there. When the anti-crushing mechanism is correctly installed, the hood should automatically stop and go up again when the pressure reaches around 12kg. This can be checked by, for example, using scales (such as fish weighing scales or dynamometer).
3. Tighten the screw a quarter of a turn and repeat the test. The pressure switch is usually adjusted correctly when length a = approximately 12mm. One revolution of the screw is equivalent to around 1mm. If the screw is tightened (turned clockwise) the pressure switch will become more sensitive and turn off more easily, and vice versa.

Make sure you do not set the pressure switch to turn off too easily. This could mean that the pressure switch will break if, for example, there is too much dirt on the sliding surface of the hood, or the hood is stiff for any reason, causing it to not go down.

3.6 Installation and connection of auxiliary equipment and options



- Once the machine is in place and has been adjusted horizontally and vertically, the auxiliary equipment can be fitted.
- The machine can be equipped with a number of options. Check what your machine is equipped with, which will vary depending on market.

The various options normally place no specific requirement on the installation. Brief descriptions of certain options are provided below.

3.6.1 ECO flow (condensing unit)




- A hot and cold water connection is required.
- The machine has a 15kW booster heater, but can also optionally be fitted with a 12kW booster heater.
- Automatic rinse cleaning of heat recovery unit.
- "CO" is shown on the machine's display when the condensing unit is active and the function may then be cancelled.
- May be retrofitted.

3.6.2 Cold water-connected machine




15kW booster heater.

3.6.3 Basket conveyor with foldable grid sections (WD206.5371 & WD206.5372)

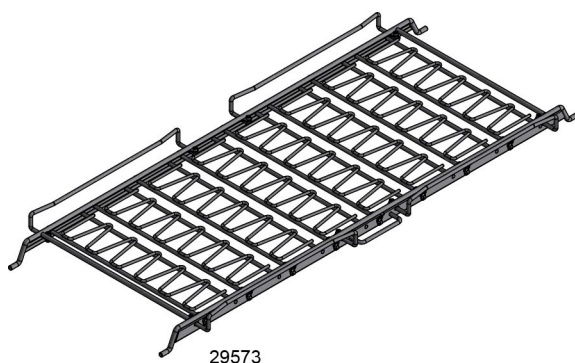

- Foldable.
- May be retrofitted.

3.6.4 Grid basket

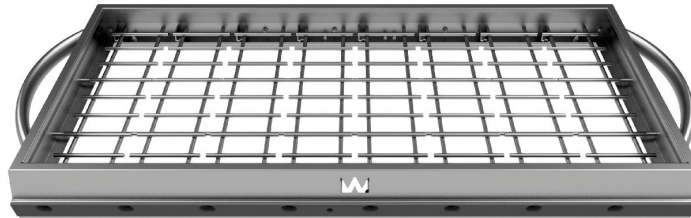

Gallerkorg



Removable.

3.6.5 Drain pump



Can be retro-fitted, then use kit WD748.5193.

3.6.6 Marine design



Special machine feet and special connection voltage.

3.6.7 Active filter



- The machine can be equipped with an active filter for collecting dirt in the washing tank. The filter is located under the strainers in the drain filter.
- Machines equipped with an active filter also have a drain pump fitted.



Aktivt filter
Active filter with drain pump

3.6.8 Adaptation for WD-PRM 6/7




The level pipe is secured in WD-PRM 6/7.


Setting the pressure switch

	Upper level	Lower level
WD-PRM 6/7	220 mm	155 mm
WD-12S	Standard	Standard

Water and waste pipe connections

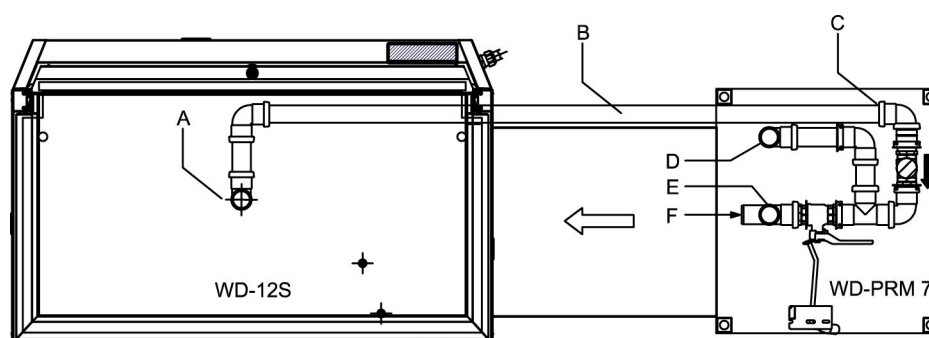

Feed direction: Right to left

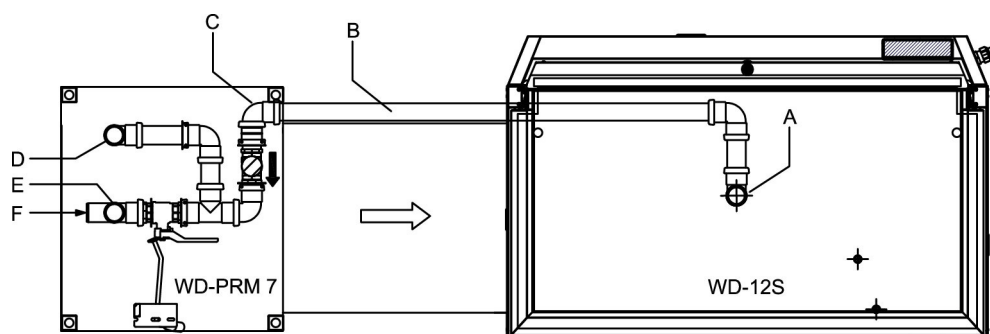

Feed direction: Left to right

- A=Water connection in the bottom of the dishwasher's washing tank on WD-12S. The connection must be fitted with a bottom filter. NOTE! No level pipe.
- B=Connecting pipe. Cut to a suitable length.
- C=Connection for connecting pipe.
- D=Water connection in the bottom of washing tank on WD-PRM 6/7. The connection must be fitted with a bottom filter.
- E=Drain connection in the bottom of washing tank on WD-PRM 6/7.
- F=Connection for waste pipe between machine and floor drain.

3.6.9 Reduced opening height



- The machine's opening height is reduced by either 50 or 100mm.
- Can be retro-fitted, then use kit WD310072.76 (-50mm) and WD310072.75 (-100mm).

3.6.10 Autostart



- The hood on the machine will close and washing will start when the washing basket is pushed into the machine.
- Can be retro-fitted, then use kit WD748.5203.

3.6.11 Hot water filling for demi water rinsing



- NOTE! Hot water is connected to the machine at (4).
- NOTE! Demi water for the final rinse is connected at (3).
- The machine has a 15kW booster heater.


3.6.12 Conveyors and roller conveyors

Once the machine is in place and has been adjusted horizontally and vertically, the auxiliary equipment can be fitted.

NOTE! When connecting sinks and conveyors, no holes must be drilled on the front of the machine.

The machine can be positioned so that it can be straight-loaded or corner-loaded.

Side support for corner-loading

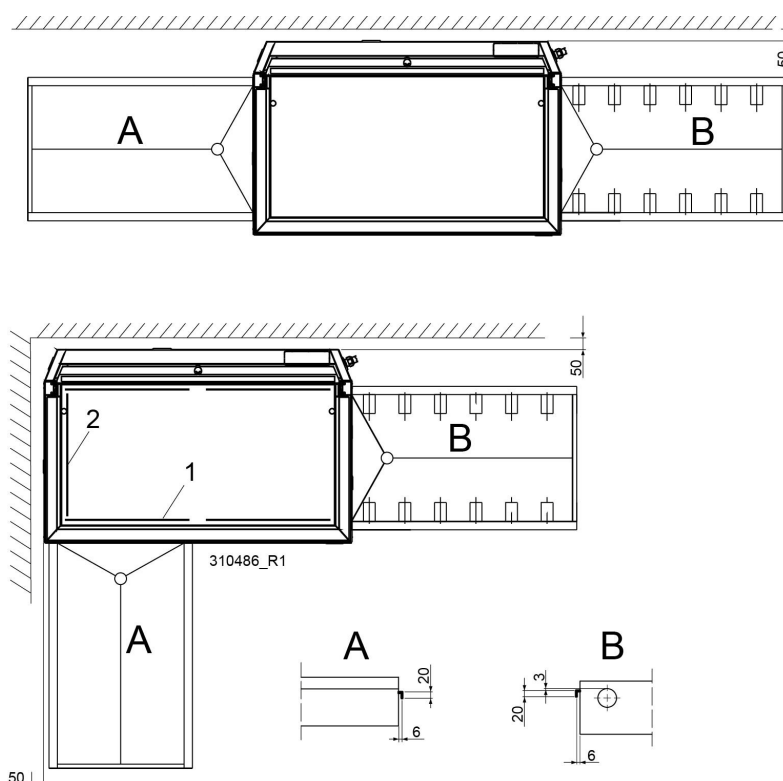

A=Connection sink

B=Connection conveyor

1=Side support (existing support is removed)

2=Side support (the machine is supplemented with this (not included))

The connection profile must look like the one shown in the drawing. The distance of 6 mm may be reduced, but must not be less than 3 mm.

- Attach the sink connection to the machine and then adjust.
- Drill two $\varnothing 4.5$ mm holes through the sink connection and the machine, approx. 100 mm from each outer edge.
- Countersink the holes.
- Seal with silicone between the connection and the machine.
- Secure the sink with countersunk M4 screws, grommets on the outside surface and nuts. Alternatively, you can secure the sink to the wall with wall brackets.

Use a spirit level to check that the sinks are horizontal and adjust the height, if necessary.

3.7 Trial operation

Prepare the machine for trial operation with the help of OPERATING INSTRUCTIONS. The instructions describe the measures that must be taken to prepare the machine for operation.

3.7.1 Start-up schedule

This should be completed when the machine is started up and used.

Machine type:
Machine serial number:
Installation date:

Read the installation and user manuals carefully. Then check the following points:

1. Check:

- Water and waste pipe connections
- That the machine is evenly balanced
- Detergent and drying agent
- The filter, filter tray and level pipe are in place
- That the overheating protection device is reset
- That bleeding of the booster pump has been carried out according to the manual

2. Filling the machine:

- Turn on the power switch and any circuit breakers
- Press the machine's control button ON/OFF
- Close the hood
- Bleed the booster pump
- Bleed the hood lifting cylinder
- Fill the machine with water in accordance with the INSTRUCTIONS FOR USE
- Bleed the hood lifting cylinder

3. Start the machine:

- Check the direction of rotation of the pumps
N.B.! If the direction of rotation is wrong, the phase must be inverted on the lockable power switch
- Empty the machine and refill it
- Check the final rinse flow during filling

4. Check the setting of the reference values:

- All the reference values have been set to the recommended values on delivery
- Check the temperatures

5. Run a number of washes complete with dishware and check:

- There are no water leaks
- The automatic hood lift's anti-crushing system is working
- The water temperatures are maintained
- The dishware is clean
N.B.: If the machine is equipped with detergent dosing, this function is roughly set at the factory; contact your chemical supplier for a more precise setting.
- The dishware is dry
N.B.: If the machine is equipped with drying agent dosing, this function is roughly set at the factory; contact your chemical supplier for a more precise setting.

6. Final check: Empty the machine and turn off the power using the power switch.

- Re-tighten all connections on contacts and any circuit breakers
- Set all the circuit breakers to the ON position
- Display the maintenance instructions supplied with the machine.

7. Train the dishwashing personnel

- Washing
- Care (daily, weekly and other frequencies)
- Recommendation for annual service

3.8 Documentation



For correct use and servicing, it is essential that the documentation accompanying the machine is made available to personnel who will be using the machine. The installation and user manual, which describes handling and care among other things, should be stored near the machine.

4. Operating instructions



Read the chapters GENERAL INSTRUCTIONS and SAFETY INSTRUCTIONS carefully before starting work.



This chapter describes what must be done with the machine:

- Before washing
- How washing should be performed
- After completed washing
- In the event of error messages and troubleshooting

The use of the machine is dependent on how the machine is equipped.



When the machine is not in use for an extended period of time, e.g. overnight, over a weekend or similar, the machine's power supply must be isolated, the water supply shut off and the machine left open.



- The machine can also be connected to a WD-PRM6/7.
- The procedure for start-up, washing, etc. is described in the manual for the WD-PRM6/7.




As an option, the machine can also be equipped with a USB socket for downloading reports. When the machine is equipped with this socket, it will be located close to the panel.

- The user can download a customer report by connecting a USB memory stick (with an LED which should face "upwards") to the socket, which is located close to the panel.
- The USB stick (which is supplied with the machine upon delivery) must contain the file "ESP_1_5_On.cfg" and a folder named "Protocol".
- The report contains "Current machine model", "Operating information" and "HACCP" if this function is activated.
- When the machine is switched on and ready to use, the USB stick is connected. The report is then downloaded. The LED on the USB stick flashes during downloading and switches to a steady light when the download is complete. Wait a few more seconds before removing the USB stick.

4.1 Before washing

4.1.1 Machine design

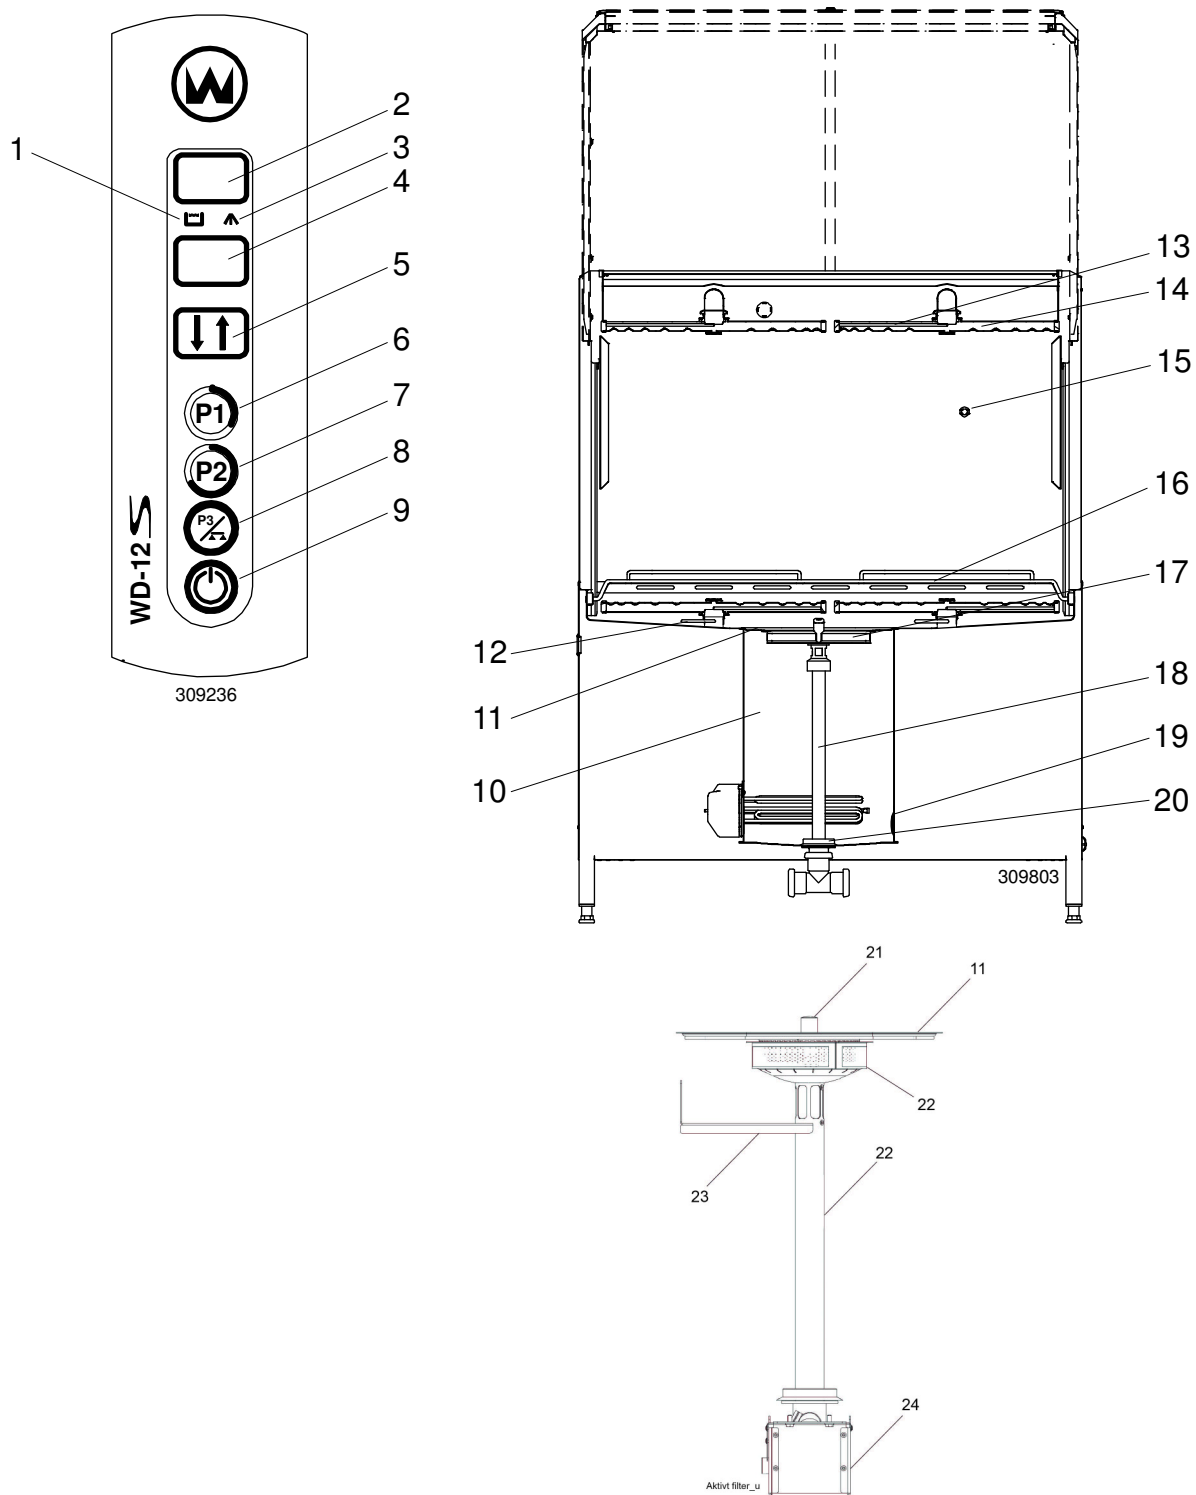

1. Symbol for washing function. After the machine is started, the symbol lights up when the tank is full. The symbol flashes if the water level in the tank is too low.
2. Display for temperature during operation. When checking and setting reference values, the display shows the number for the relevant reference value, e.g. 01, 02, 03, etc. Together with display (4), it shows error messages.
3. Final rinse indicator. The symbol is lit while the machine is filling up, during the final rinse phase and when the cleaning programme is run after a completed washing cycle. The symbol flashes if the hood is opened during the washing cycle or if the correct rinse temperature has not been reached when the rinsing is due to start.
4. Display for programme display during operation. If the machine is equipped with ECO flow, "CO" is shown on the display when this is active. When checking and setting the reference values, the display shows the relevant reference value.
5. Button for opening/closing the hood.
6. Button for washing programme P1. When the machine is in service mode, P1 is used to show the different reference values and to reset the reference values to the last saved values. If the machine has a drain pump, P1 is used to start the drain pump and empty the tank after washing.
7. Button for washing programme P2. P2 is used in service mode to increase a reference value or jump between tables. In shut-off mode the software version number can be displayed by holding down P2.
8. Button for washing programme P3. P3 is used in service mode to reduce a reference value or jump between tables. P3 is used in shut-off mode to start internal rinsing when the cleaning programme is used to clean the machine.
9. Button to switch the power on or off. This button is also used to reset alarms, display the water flow to the machine and to move to service mode.
10. Wash tank
11. Filter tray
12. Levers (qty. 2) for selecting Normal load (-) and Heavily soiled load (+)
13. Rinse pipe
14. Washing arm (qty. 4), removable
15. Bracket to support basket conveyor (16), with grid section (option) in folded position.
16. Basket conveyor, foldable. The basket conveyor may optionally be equipped with grid sections.
17. Strainer basket
18. Level pipe
19. Pump filter
20. Rubber sleeve
21. Strainer basket (option)
22. Level pipe with active filter (option)
23. Level pipe holder (option)
24. Drain pump (option)



On machines with "Active filter", pos (17, 18) are replaced by pos (21, 22, 23, 24).

In the following chapter, figures are given in brackets to clarify what needs to be done. These numbers refer to image and list above.

4.1.2 Preparations before filling

Check:



- That the machine and removable parts have been cleaned. If not – clean them!
- That no dirt is in the washer arms' (14) or in the rinse pipes' (13) nozzles
- That removable parts are correctly in place
- The amount of detergent and drying agent (option)
- That the stopcock for the water to the machine is open
- That the power switch is in the ON position
- That the machine's control button ON/OFF (9) is switched on

Remember:



- Ordinary washing-up liquid must not be used in the machine or for soaking. Contact your detergent supplier regarding the choice of a suitable detergent. Washing-up liquid causes a build-up of foam, produces poor wash results and can damage the machine.
- Steel wool must not be used for pre-treating the dishware.
- Only detergent and drying agent intended for industrial machines may be used.
- If using liquid detergent and drying agent, the same make and type of detergent and drying agent should be used.
- If the machine is designed for glass washing and equipped with a condensing unit, detergent intended for aluminium should be used.
- If the machine is equipped with a condensing unit, dishware should be removed from the machine as soon as the wash cycle is complete so that re-condensation does not occur.

4.1.3 Filling and heating the machine

- Switch on the power supply to the machine using the power switch.
- Switch on the power supply on the machine using the 0/1 pushbutton (9).
- Close the hood by pressing button (5). The display (2) shows the temperature of the rinsing water. The display (4) shows P0. P0 is a pause mode which indicates that no washing programme has been selected.
- Filling and heating for a standard machine take approx. 20 minutes at an incoming water temperature of 55 °C. The heating time is dependent on the incoming water temperature. The symbol (3) will light up while the machine fills with water.
- When the machine is full, symbol (1) lights up and the washing temperature is shown in the display (2). If the washing temperature falls below the set value by more than 5 °C, the temperature shown on the display (2) flashes.
- The machine cannot start washing until the set temperature minus 5 °C for the washing water has been reached, if this function is selected. The normal operating temperature for the washing phase is 60 °C. If the washing temperature falls below 50 °C, the temperature display flashes.

4.2 Washing




To reduce the risk of strain injuries, the dishware should be stacked in baskets positioned on the attached auxiliary equipment so that these may be moved along slide rails or rollers. Grid baskets or basket conveyors with grid sections (options) may be used when washing heavy dishware to reduce straining. Using these also allows the dishware to be stacked directly in the machine.

4.2.1 Positioning of dishware in baskets




Depending on what the machine is equipped with, it will be delivered with baskets or a basket conveyor with grid sections (option) or removable grid baskets (option).

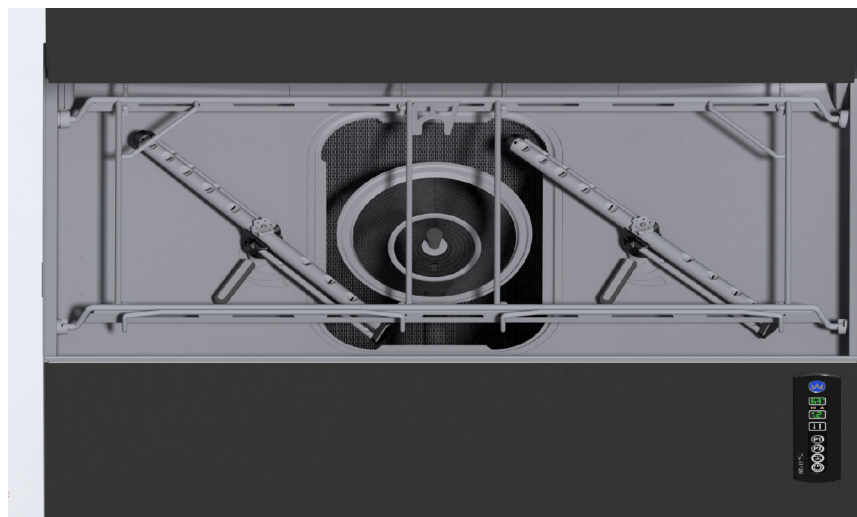


Maskin med korgbana_R1

Machines with a basket conveyor

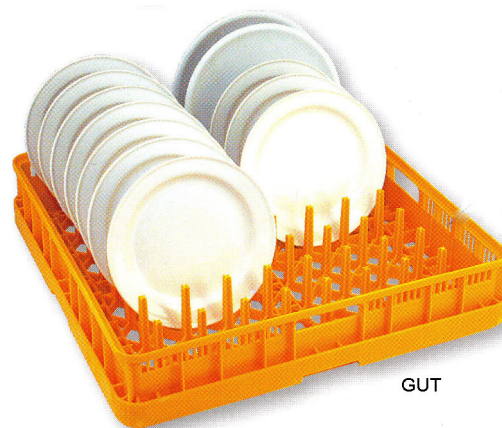

GUT

The yellow basket is used for side plates, trays, plates, etc.

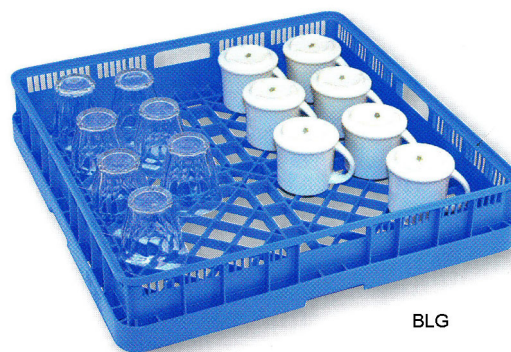


BLG

The blue basket is used for glasses, cups and canteens



BRB

The brown basket is used for cutlery during the first wash

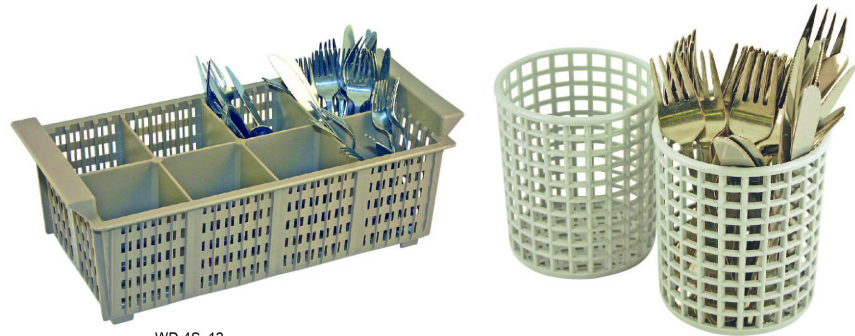


WD-4S_12


Cutlery must therefore be placed in designated baskets before the second wash, the baskets above are placed in the blue basket



There are also various special baskets, racks and accessories (option) for use in the machine.

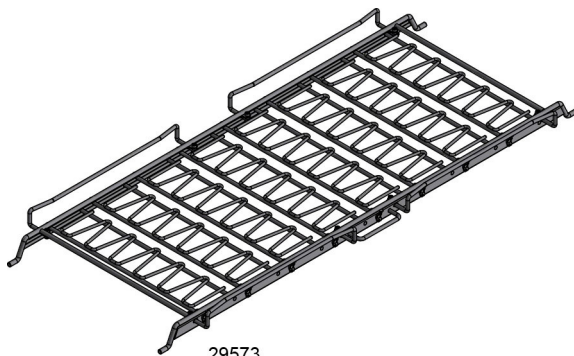

29573

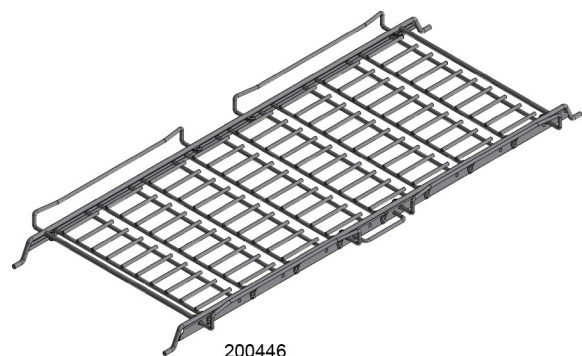

200446

Basket conveyor with foldable grid sections (option)




korg+stall

Washing basket located on basket conveyor with grid sections




Gallerkorg

Grid basket (option)

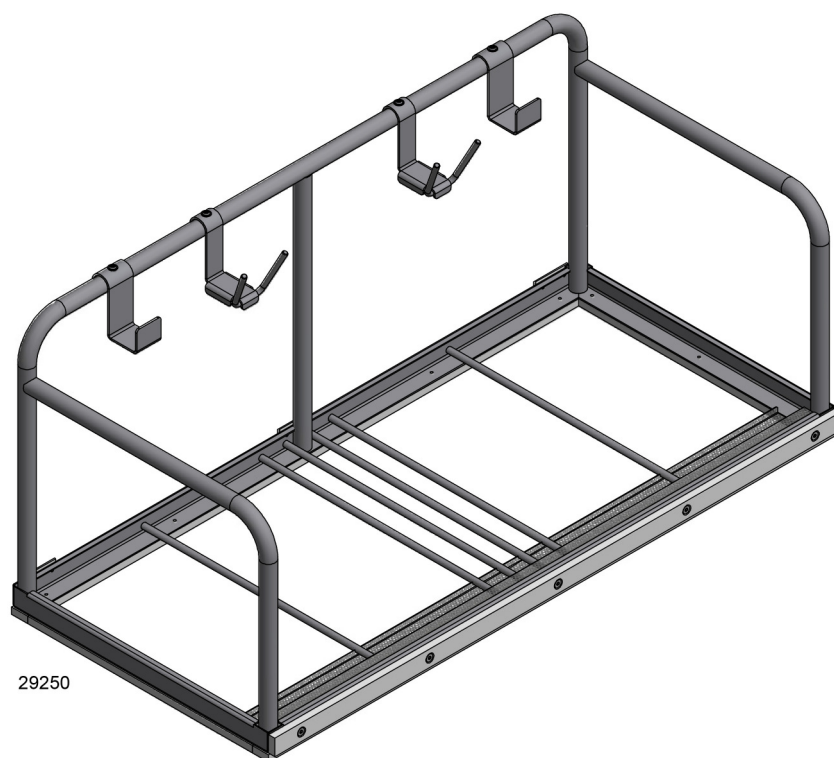

Basket for special equipment, PPE (option)

4.2.2 Programme selection – Normal load (-)/Heavily soiled load (+)

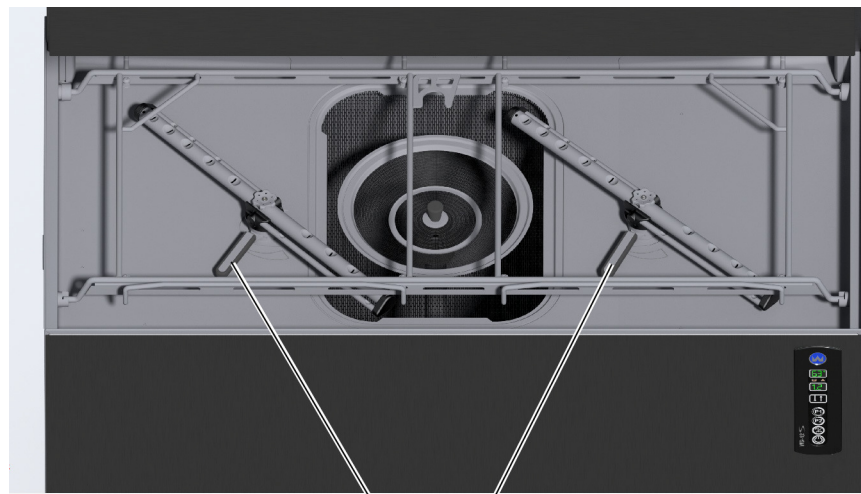

Normal-Grov_R1



Normal load (-) and Heavily soiled load (+) may be selected using the levers

The machine can be used as a standard dishwasher for washing plates and glassware in baskets or as a potwasher.

If using the machine for a normal load (-), the levers (12) must be at the (-) position. The different programs are then used as follows:

The control panel has three programme buttons: P1, P2 and P3.

- P1=Lightly soiled items (e.g. trays and glassware)
- P2=Normal load
- P3=Heavily soiled items


For heavily soiled items, move the levers (12) to the (+) position.

The machine may optionally be equipped with grid baskets or for a basket conveyor with grid sections (16).

The washing temperature and washing and rinsing times for each programme are pre-set on delivery. The operator can change these values if required.

PPE (option)

When the machine is in PPE mode, all wash programmes restart three (3) times in a row.

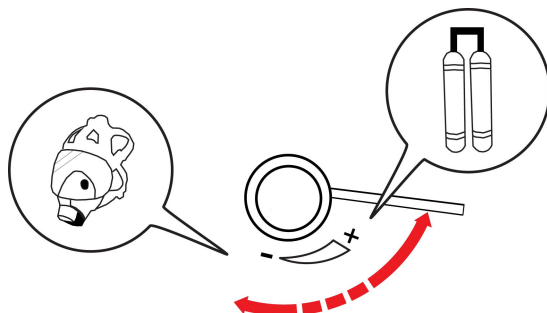

Sign on machines in PPE mode

When washing gas cylinders, heavily soiled loads should be selected.


4.2.3 Changing the washing temperature and washing time

The factory setting for the washing temperature is 60 °C. The operator can adjust the temperature to between 55 and 70 °C.

The washing temperature and chemical washing times are set on delivery.

Changing the values. Selecting service mode

The machine must be set to service mode when the operator needs to change a value. This is done using the control panel. The values that can be changed flash. The displays and buttons have different functions than when the machine is in normal operating mode.

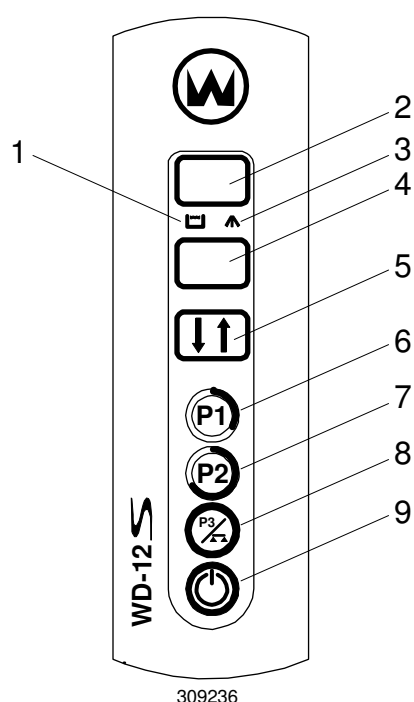

The panel's functions in service mode

1. Symbol for washing function.
2. Display for the table numbers and the row numbers of each table.
3. Symbol for final rinse.
4. Display of values and other information for all the row numbers in the tables.
5. Button for opening/closing the hood.
6. Use the P1 button to move between the table rows or to reset the values to those last saved.
7. Use the P2 button to increase a value or move forwards between the tables.
8. Use the P3 button to reduce a value or move backwards between the tables.
9. Use the 0/1 button to enter or exit service mode.

All the values are laid out in tables, with each table containing a certain number of rows, one for each value. The table containing the values for the washing temperature and washing times for the different programmes is designated "0.0."

In table "0.0", the values for washing temperature washing and rinsing times are on rows 01 to 10. The table below shows a standard machine.

Table 0.0			
Row	Relates to	Factory setting	Range of settings
01	Washing temperature	60 °C	55 - 70 °C
02	Washing time programme P1	1.0 min.	1.0 - 6.0 min.
03	Washing time programme P2	1.5 min.	1.0 - 6.0 min.
04	Washing time programme P3	5.0 min.	1.0 - 6.0 min.
08	Rinsing time, programme P1	13 seconds	10-15 seconds.
09	Rinsing time, programme P2	13 seconds	10-15 seconds.
10	Rinsing time, programme P3	13 seconds	10-15 seconds.



Times and temperatures can be changed differently, depending on whether and how log-in has taken place.

To select service mode and change the washing temperature and washing time, follow these instructions:


- When moving to service mode, the washing programme must be finished.
- Press the 0/1 button (9). Both the displays (2, 4) will now show two horizontal dashes "--" and the machine will be in shut-off mode.
- Hold the 0/1 button (9) down for approximately 3 seconds until the top display (2) shows "0.0.". The two zeros "0.0" indicate that the machine is in service mode.
- Press P1 (6). The top display (2) will now show 01, the first row number in the table. The bottom display (4) shows the set washing temperature flashing; only values that flash when they appear can be changed. If the temperature is to be changed, press P2 (7) to increase the value or P3 (8) to reduce the value.
- If the washing time for a programme is to be changed, use P1 (6) to move to the next row number in the table. For explanations of row numbers 01, 02, 03 and 04, see table "0.0" above.
- When the settings are complete, exit service mode by holding down the 0/1 button (9) for approximately 3 seconds until the displays show two horizontal dashes "--". The changed values are now saved.
- Return to normal operating mode by then quickly pressing the 0/1 button (9).

4.2.4 Washing



Make sure that the items are in a position where they cannot move out of the washing basket during the washing and rinsing phases.

- For longer periods between washes, the machine should be in the “normal” mode and closed. This ensures the temperature in the machine is maintained.
- Check that the detergent is suitable for the items.

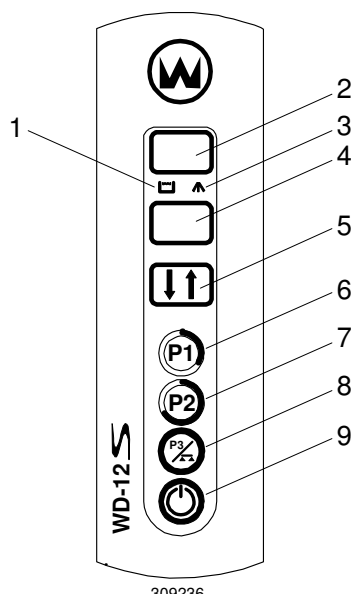

- Remove larger food particles by rinsing the items using a hand shower. The water in the hand shower must not exceed 40 °C. Place the items to be washed in the basket.
- Open the hood (5).
- Select normal load (-) or heavily soiled load (+) using the levers (12).
- Select programme P1 (6), P2 (7) or P3 (8).
- Slide the basket into the machine. If the machine is equipped with Autostart (option), the hood will now close and the machine will start the wash and the remaining washing time will be shown on the display (4).
- Close the hood (5). The machine starts washing with the selected programme. The display (4) now shows the program's remaining washing time.
- The symbol (1) is lit during the washing phase.
- Once the rinsing phase starts, the symbol (3) lights up. If the final rinse water has not reached the correct rinse temperature once rinsing starts, the symbol (3) flashes and the machine continues washing until the rinsing water has reached the correct temperature.
- If the machine is equipped with ECO flow, this will run at the same time as the final rinse and “CO” will be shown on the display (4). The function may be cancelled by opening the hood using the button (5).
- The hood opens automatically once the washing cycle has finished. If the hood is opened during a washing cycle, the machine will stop and automatically start from the beginning once the hood has been reclosed.
- Once the machine has stopped, the display (4) shows the last programme run. Remove the washing basket and allow the washed items to dry.

P0 is a pause mode and is used in the case of prolonged intervals between washes in order to maintain the tank temperature. The hood must be closed. The machine does not start in P0 mode.

- Press the programme button for the current programme once. "P0" appears on the display (4).
- Press the button again to return to the current programme.
- The hood must be opened and closed between each washing cycle.

Washing with one basket, machines with Autostart (option)




If the machine is equipped with "Autostart" and washing is to take place with only one basket, this basket must be put into the first position and the machine will start washing using the most recently selected programme.

Washing with double baskets, machines with Autostart (option)



If the machine is equipped with "Autostart" and washing will take place with double baskets, basket 1 must be fed into second position in the machine. Basket 2 is then fed in and left in the first position. The machine will start washing using the most recently selected programme.

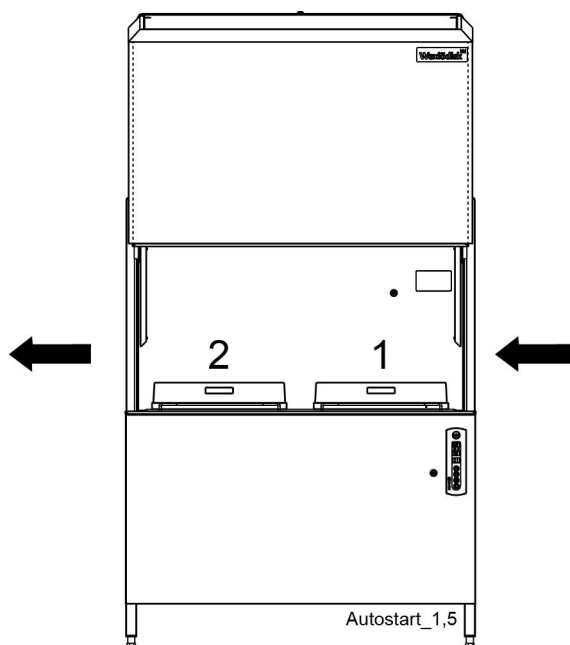

Machines with a Right - Left feed direction

Washing with pre-wash machine WD-PRM 6/7 (option)

The start-up and washing procedures etc. are the same as for standard washing. See also the manual for WD-PRM6/7.

4.2.5 Checking the wash result



The dishware should be checked after each wash for:

PROBLEM	CAUSES & MEASURES
Starch spots	<ul style="list-style-type: none">• Scraping: Important to remove as much food particles as possible before washing. This also means that the water in the machine does not need to be changed as often. Scrape better.• Detergent and drying agent dosage: If using liquid detergent and drying agent, the same make and type should be used. A service technician should be contacted to rinse the equipment with water when replacing the detergent and drying agent. The dosing affects both detergent and drying results of the dishware. The hardness level of the water affects the consumption of detergent. Contact the detergent supplier.• Temperatures: At incorrect temperatures the dishes will not be clean. Contact a service technician if you need to change the set values.• Programme selection: Programme with too short a washing time selected. Choose a programme with a longer washing time.• Cleaning the machine: Insufficient cleaning of the machine affects the results of the washing. Ensure better cleaning of the machine.• Placing dishes in baskets: Incorrectly placed items can mean that the washing water does not reach the items during washing and rinsing.• Soaking: Items with hard dried food. Soak the dishes in water. Do NOT use washing-up liquid.
Misting	
Protein residues	
Detergent residues	

4.2.6 Changing the water



To achieve the best possible washing results, it is important that the water is changed daily. For normally soiled items, the water should be changed after around 30 washes. However, always change the water in the event of foam problems in the tank.

If IF09 appears on the display, this indicates that the water should be changed.

When the machine is in P0 mode with the hood open and the symbol (1) is lit, change the water as follows:

Machines without a drain pump

- Check that the machine is in P0 mode.
- Open the hood (5).
- Remove any washing baskets and grid baskets (option) from the machine. Fold up the basket conveyor (16); as an option, it can be equipped with foldable grid sections, lock it in place using the clasp (15) on the back of the machine.
- Remove the strainer basket (17) and filter tray (11) and clean them.
- Empty the machine by turning the level pipe (18) a quarter of a turn anti-clockwise.
- When the tank is empty, turn the level pipe (18) clockwise and refit the filter tray (11) and strainer basket (17).
- Fold down the basket conveyor (16).
- Close the hood (5) and the machine will refill. Check that the final rinse symbol (3) is lit.

Machines with a drain pump (option)



NOTE! The hood must be open when the drain pump is running.

- Check that the machine is in P0 mode.
- Open the hood (5).
- Remove any washing baskets and grid baskets (option) from the machine. Fold up the basket conveyor (16); as an option, it can be equipped with foldable grid sections, lock it in place using the clasp (15) on the back of the machine.
- Remove the strainer basket (17), filter tray (11) and the level pipe (18) and clean them.
- Press the 0/1 button (9).
- Press P1 (6). One display (2) shows "dP", and the other (4) shows the time. The drain pump starts and stops after a set time.
- When the tank is empty, refit the level pipe (18), filter tray (11) and the strainer basket (17).
- Fold down the basket conveyor (16).
- Press the 0/1 button (9).
- Close the hood (5) and the machine will refill. Check that the final rinse symbol (3) is lit.

Machine with “Active filter” and drain pump (option)

NOTE! The hood must be open when the drain pump is running.

- Check that the machine is in P0 mode.
- Open the hood (5).
- Remove any washing baskets and grid baskets (option) from the machine. Fold up the basket conveyor (16); as an option, it can be equipped with foldable grid sections, lock it in place using the clasp (15) on the back of the machine.
- Remove the strainer basket (21), filter tray (11) and level pipe with active filter (22), and clean them.
- Press the 0/1 button (9).
- Press P1 (6). One display (2) shows “dP”, and the other (4) shows the time. The drain pump starts and stops after a set time.
- When the tank is empty, refit the level pipe (22), filter tray (11) and strainer basket (21).
- Fold down the basket conveyor (16).
- Press the 0/1 button (9).
- Close the hood (5) and the machine will refill. Check that the final rinse symbol (3) is lit.

4.3 After use – Cleaning



HACCP is a preventive inspection system to ensure hygiene requirements are met during the washing process and cleaning of the machine. As a result of its design, the machine meets strict hygiene requirements. Regular, thorough cleaning is also important from a hygiene perspective. A machine that is properly cleaned helps produce a good wash result, reduces the risk of dirt accumulating, increases the service life of the machine and reduces the risk of emergency shut-down.


See the WebTool manual for the HACCP alarm options.

4.3.1 Incorrect cleaning methods



NOTE! An incorrect cleaning method may damage the machine. The following points must be observed:

- Do NOT use steel wool as it will cause corrosion to form on the machine.
- If detergent is used, it must not contain abrasives. Detergents containing abrasives will damage the stainless steel panels.
- The exterior of the machine must not be hosed. Water can enter the machine and damage the control panel and electrical equipment.
- Pressure washers and steam can damage the machine and must NOT be used for cleaning purposes. Never use a pressure washer to clean the floor within 1 metre of the machine. The supplier cannot be held liable for any faults caused by the use of pressure washers on the machine and any such use may invalidate the warranty. There is a risk of splashing even if the floor is hosed down.

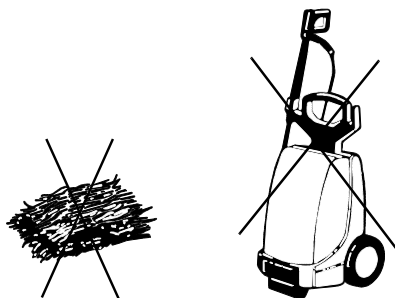

12_07

Steel wool and pressure washers must not be used for cleaning

4.3.2 Emptying, internal machine rinsing




When the machine is switched off, the number of baskets washed is displayed for around 5 seconds.

Two horizontal dashes "--" are then shown in the display for 3 minutes. At this point, the machine is still live and emptying and internal rinse cleaning must start within this period. The machine then switches off automatically.




There are various options for storing the removable parts when the machine has been cleaned. It is important that the level pipe sleeve is not damaged, and the basket conveyor has a holder for this.

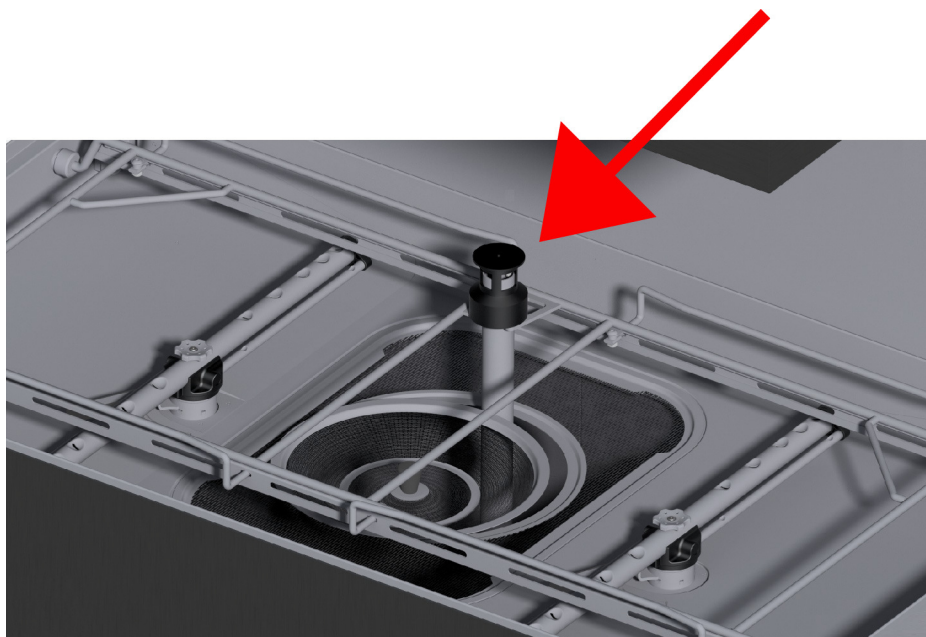


Korgbana_nivärör_R1

Placing cleaned components in machines with a basket conveyor

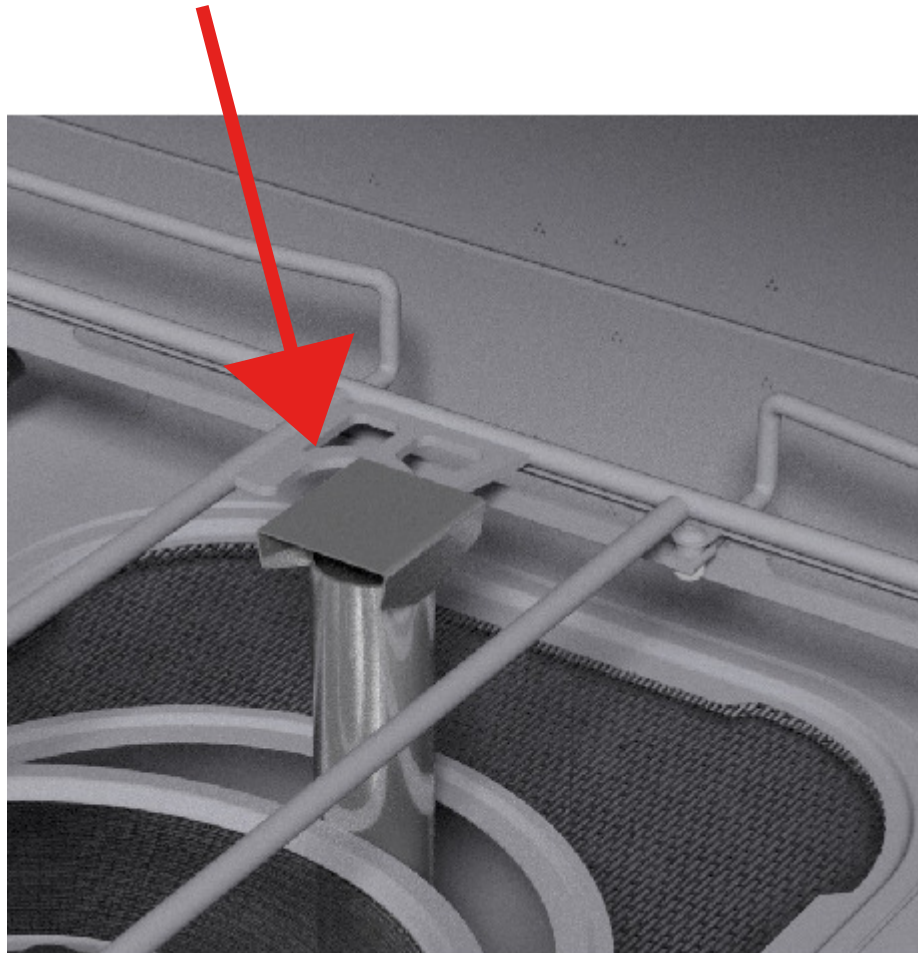


Korgbana_Nivårör_Dp

Placing cleaned components in machines with a drain pump and a basket conveyor

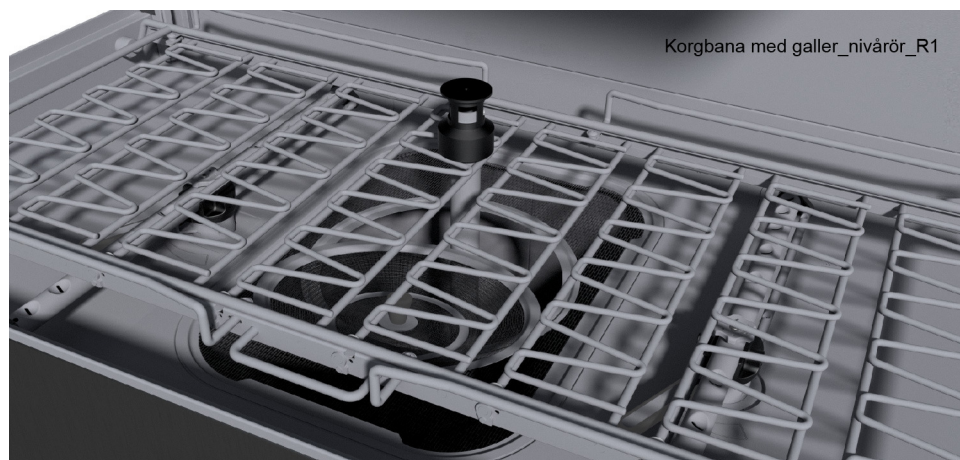

Placing cleaned components in machines with a basket conveyor with foldable grid sections

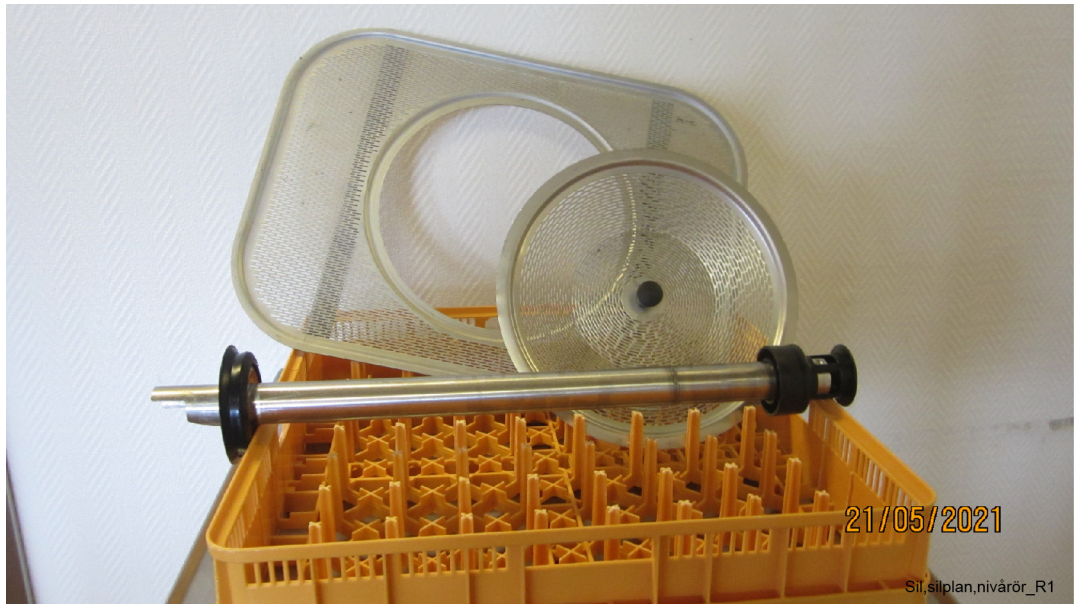

Placing cleaned components in a basket after washing

Machines without a drain pump

- Check that the machine is in P0 mode.
- Open the hood (5).
- Remove any washing baskets and grid baskets (option) from the machine. Fold up the basket conveyor (16); as an option, it can be equipped with foldable grid sections, lock it in place using the clasp (15) on the back of the machine.
- Remove the strainer basket (17) and filter tray (11).
- Empty the machine by turning the level pipe (18) a quarter of a turn anti-clockwise.
- Once the tank is empty, take out the level pipe (18).
- Press 0/1 (9) on the panel.
- Close the hood (5).
- Press P3 (8). The display (2) shows "SC" and the internal cleaning process starts. The display (4) shows the remaining cleaning time. When the cleaning process is finished, both the displays show two horizontal dashes "--".
- Open the hood (5).
- Check that the washing arms' (14) and the rinse pipes' (13) nozzles are clean and that no objects have fallen and become lodged in the machine.
- Clean the strainer basket (17), filter tray (11), level pipe (18) and pump filter (19).
- Clean the basket conveyor (16) and any grid sections/grid baskets (option).
- Store the cleaned parts in a washing basket.
- Ensure that the level pipe's rubber sleeve (20) does not become deformed, by allowing it to hang free.

Machines with a drain pump (option)



NOTE! The hood must be open when the drain pump is running.

- Check that the machine is in P0 mode.
- Open the hood (5).
- Remove any washing baskets and grid baskets (option) from the machine. Fold up the basket conveyor (16); as an option, it can be equipped with foldable grid sections, lock it in place using the clasp (15) on the back of the machine.
- Remove the strainer basket (17), filter tray (11) and the level pipe (18) and clean them.
- Press the 0/1 button (9).
- Empty the machine. Start the drain pump using button P1 (6). "dP" is shown on one display (2) and the other display (4) shows the remaining emptying time. The water in the washing tank is pumped to the drain. The pump stops automatically after a set time.
- Once the tank is empty, clean the pump filter (19).
- Close the hood (5).
- Press P3 (8). The display (2) shows "SC" and the internal cleaning process starts. The display (4) shows the remaining cleaning time. When the cleaning process is finished, both the displays show two horizontal dashes "--".
- Open the hood (5). Check that the nozzles on the washing arms and rinsing pipes (13, 14) are clean and that no objects have fallen and become lodged in the machine.
- Clean the basket conveyor (16) and any grid sections/grid baskets (option).
- Store the cleaned parts in a washing basket.
- Ensure that the level pipe's rubber sleeve (20) does not become deformed, by allowing it to hang free.

Machine with “Active filter” and drain pump (option)



NOTE! The hood must be open when the drain pump is running.

- Check that the machine is in P0 mode.
- Open the hood (5).
- Remove any washing baskets and grid baskets (option) from the machine. Fold up the basket conveyor (16); as an option, it can be equipped with foldable grid sections, lock it in place using the clasp (15) on the back of the machine.
- Remove the strainer basket (21), filter tray (11) and level pipe (24), and clean them.
- Press the 0/1 button (9).
- Empty the machine. Start the drain pump using button P1 (6). "dP" is shown on one display (2) and the other display (4) shows the remaining emptying time. The water in the washing tank is pumped to the drain. The pump stops automatically after a set time.
- Once the tank is empty, clean the pump filter (19).
- Close the hood (5).
- Press P3 (8). The display (2) shows "SC" and the internal cleaning process starts. The display (4) shows the remaining cleaning time. When the cleaning process is finished, both the displays show two horizontal dashes "--".
- Open the hood (5). Check that the nozzles on the washing arms and rinsing pipes (13, 14) are clean and that no objects have fallen and become lodged in the machine.
- Clean the basket conveyor (16) and any grid sections/grid baskets (option).
- Store the cleaned parts in a washing basket.
- Ensure that the level pipe's rubber sleeve (20) does not become deformed, by allowing it to hang free.

4.3.3 Daily cleaning

Machines with ECO flow (condensing unit)

The machine's heat recovery unit is rinsed clean automatically when the machine fills and during ordinary use of the machine.

Internally

The interior of the machine will be rinsed clean when the machine is switched off in accordance with the manual.

Externally

Wipe the outside of the machine with a soft, damp cloth.


- If detergent is used, it must not contain abrasives. Detergents containing abrasives will damage the stainless steel panels.
- The exterior of the machine must not be hosed. Water can enter the machine and damage the control panel and electrical equipment.

4.3.4 Cleaning each week or as required

Weekly cleaning should be more thorough than daily cleaning. If the information message "IF10" is shown in the display, weekly cleaning needs to be performed.

In addition to the daily cleaning measures, clean the machine as per these instructions:

- Take out the wash arms (x 4). Loosen the lock nut (A) in the centre of the washer arm and remove the wash arm. Check and clean the nozzles if necessary. Rinse the wash arms and refit them.

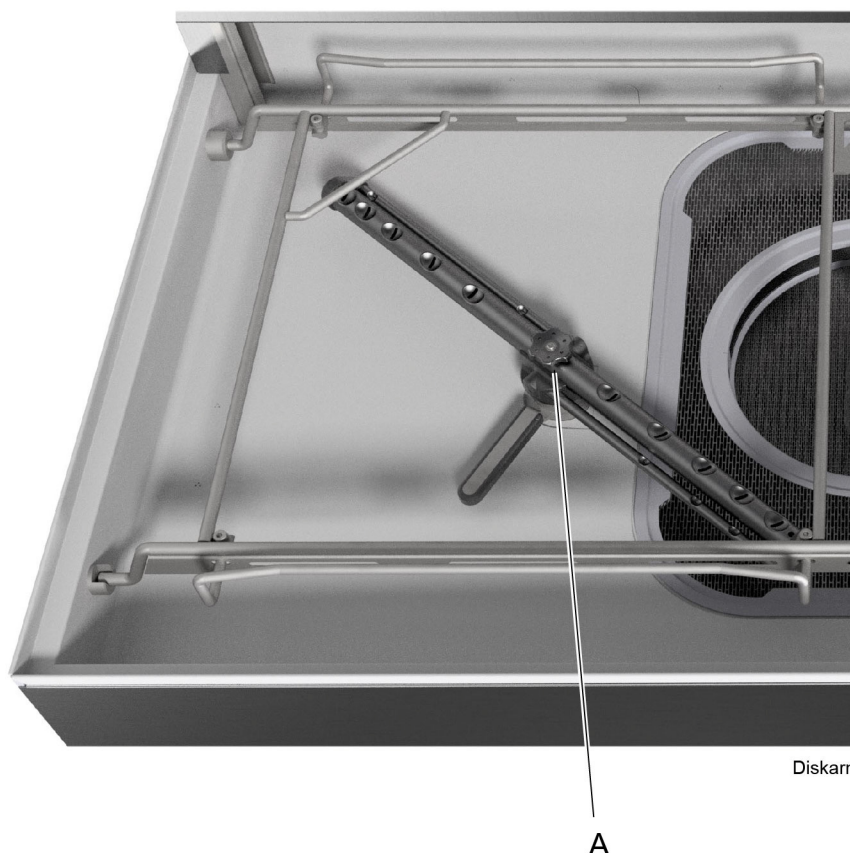

Diskarm

A=Lock nut

4.3.5 Operating problems



Check:

- Has the appliance been used according to the instructions?
- Are all the removable parts in their correct place?
- Is the main switch in the ON position?
- Are there any error messages on the display?
- Are the fuses in the electrical cabinet still intact? Ask service personnel to check the fuses.

Error messages

During operation, various alarms or information messages can appear on the panel's display. There is a distinction between IF and Er alarms. IF alarms can normally be dealt with by the operator. If there is an Er alarm, the service personnel must be called. Some IF alarms that have been dealt with by the operator a few times will eventually change to Er alarms, meaning that the service personnel must be contacted.

Each alarm has a number: 01, 02, 03 etc. The top display shows either IF or Er. The bottom display shows the alarm number.

CODE	CAUSE	ACTION
IF01 / Er01	The time needed to fill the tank has been exceeded.	The alarm can be reset by pressing 0/1 on the panel.
	The level pipe is not in place.	Fit the level pipe.
	The level pipe's rubber sleeve is not sealing against the bottom plate.	Adjust the level pipe. Check that the rubber sleeve has not been damaged. Replace the sleeve, if it is damaged.
	The water stopcock is closed.	Open the stopcock.
Er02	It has taken too long for the machine to heat up, compared with the previous time.	The alarm can be reset by pressing 0/1 on the panel. Contact service personnel if the alarm recurs.
IF03 / Er03	The hood's pressure switch has been activated to prevent crushing injuries.	You can reset the alarm by pressing 0/1 or the button to open/close the hood.
Er04	Faulty temperature sensor in booster heater (B41).	Call service.
Er05	Faulty temperature sensor in washing tank (B21).	Call service.
IF06 / Er06	The booster heater is not cooled during the final rinse phase.	The alarm can be reset by pressing 0/1 on the panel.
	The water stopcock is closed.	Open the stopcock. Close the hood.
Er08	No temperature change in the booster heater despite the fact that the element is active.	The alarm can be reset by pressing 0/1 on the panel. Contact service personnel if the alarm recurs.
IF09	Alarm for changing the water.	Change the water. The alarm can be reset by pressing 0/1 on the panel. If the alarm is not set to stop the machine, the washing programme can continue.
IF10	Alarm for weekly cleaning.	The machine must be cleaned more thoroughly than during daily cleaning. The alarm and counter are reset by pressing 0/1 on the panel.

CODE	CAUSE	ACTION
Er12	The break tank has not been filled with water within the set time.	The alarm can be reset by pressing 0/1 on the panel.
	The water stopcock is closed.	Open the stopcock.
	Low water pressure and/or flow to the machine.	Check the water connection.
	Error on the sensor which causes the break tank to overflow.	Call service.
Er13	The level sensor in the break tank indicates an incorrect signal.	The alarm can be reset by pressing 0/1 on the panel. Call service.
Er16	The temperature in the booster heater is too low.	The alarm can be reset by pressing 0/1 on the panel. Call service.
Er23	The hood does not open when the automatic hood opener is used.	The alarm can be reset by pressing 0/1 on the panel. Contact service personnel if the fault recurs.
Er27	The machine has lost all its set values.	Call service.
IF30	Low water level in the washing tank before washing.	Check that the level pipe is closed. The alarm can be reset by pressing 0/1 on the panel.
	The level pipe's rubber sleeve is leaking.	Check that the level pipe's rubber sleeve has not been damaged.
IF34	Detergent alarm.	The alarm can be reset by pressing 0/1 on the panel.
	The machine has run out of detergent.	Check the amount of detergent and refill, if necessary.
Er94	Fuse F1 is defective.	The machine is switched off by pressing 0/1 on the panel. Call service.
Er96	The motor safety cut-out for the pumps has tripped.	The machine is switched off by pressing 0/1 on the panel. Call service.
Er97	One digital input is shorted to ground.	Call service.
Er99	Communication fault between the computer and panel cards.	The alarm can be reset by pressing 0/1 on the panel. Contact service personnel if the alarm recurs.

Troubleshooting

The following errors can be dealt with by the operator. If the problem persists, contact authorised service personnel.

PROBLEM	CAUSE	ACTION
No indication on the control panel display when the control button is pressed.	Power switch is off.	Switch on the power switch.
The machine does not fill with water.	The incoming water stopcock is closed.	Open the tap.
	The door/hood is open.	Close the door/hood.
	The level pipe is not in place.	Fit the level pipe.
	The level pipe's rubber sleeve is not sealing against the bottom plate.	Adjust the level pipe. Check that the rubber sleeve has not been damaged. Change the rubber sleeve if it is damaged.
	The final rinse pipe nozzles are blocked.	Clean the wash nozzles.
The machine fills slowly.	The final rinse pipe nozzles are blocked.	Clean the wash nozzles.
The machine does not stop filling.	The level pipe is not in place.	Fit the level pipe.
	The level pipe's rubber sleeve is not sealing against the bottom plate.	Adjust the level pipe. Check that the rubber sleeve has not been damaged. Change the rubber sleeve if it is damaged.
The hood is not opened/closed properly.	Air has got into the system.	Bleed the hood lifting cylinder as per the manual.
The machine does not start washing.	The door/hood is open.	Close the door/hood.
	Dishware is blocking the magnet in the door.	Remove the dishware in question.
Noise from the washing pump.	Low water level. Foam in the tank.	Check the level. Change the water.
The machine stops in the middle of the wash cycle and starts taking in water.	The level pipe's rubber sleeve is not sealing against the bottom plate.	Adjust the level pipe. Check that the rubber sleeve has not been damaged. Change the rubber sleeve if it is damaged.

PROBLEM	CAUSE	ACTION
The machine is not cleaning properly.	The rinse and wash nozzles are clogged with dirt.	Check and clean the nozzles.
	There is too little detergent.	Check the amount of detergent. The hose ("thick") must be submerged in liquid and the filter in the hose must be clean.
	The water in the tank is too dirty.	Change the water.
	Foam forming in the tank.	Check that the washing temperature is not too low and that the correct detergent is being used.
	Programme with too short a wash time selected.	Choose a wash programme with a longer wash cycle.
	Dirt has dried on the dishware to be washed.	Soak the dishware before washing.
	The dishware is incorrectly positioned in the baskets.	Use the correct type of washing basket and accessories to ensure that the dishware is correctly positioned.
	Detergent and drying agent of another make than usual are used.	Use the same make and type as before. Rinse the hoses and pumps with water if necessary.
The dishware has tipped over in the baskets.	The dishware is incorrectly positioned in the baskets.	Put the dishware in the correct position.
	Light dishware need washing.	Use a net grid to hold the items.
Dishware does not dry.	The rinse nozzles are blocked.	Check and clean the nozzles.
	Too little rinsing agent.	Check the amount of rinsing agent. The hose ("thin") must be submerged in liquid and the filter in the hose must be clean.
	The washed items have been left in the machine.	Remove the washed items once the programme has ended.

When you contact service personnel, you will need to provide the following information:

- Machine type and model.
- Machine serial number and date when the machine was installed.
- A brief description of the problem. Are any fault codes shown in the display?
- What happened/was being done immediately before the fault occurred?

5. Technical specifications

The manufacturer reserves the right to make changes to the technical data.

TECHNICAL DATA	
Washing pump (kW)	2 x 1.5
Booster heater (kW)	12 / 15 *
Tank heater (kW)	9
Booster pump (kW)	0.58
Drain pump (W) *	170
Heat recovery fan (W) *	52
Heat recovery fan, flow (m ³ /hour) *	540
Tank volume (l)	100
Weight, machine in operation (kg)	385 / 400 *
Maximum temperature of the surroundings for machines in operation (°C)	35
Enclosure protection class (IP)	44

* option, (ECO flow and machines connected to cold water)

CAPACITY AND OPERATING DATA	
Total washing time P1 (min.) *	1.2
Total washing time P2 (min.) *	1.7
Total washing time P3 (min.) *	5.2
Max. capacity, baskets/hour (no.)	600x400 mm / 150 500x500 mm / 100
Water consumption rinsing/programme (l) ***	5.5–8
Sound pressure level, LPA (dBA) Normal load / Heavily soiled loads ****	64 / 63
Sound power level LWA (dBA) Normal load / Heavily soiled loads ****	78 / 78

* Factory setting. The wash time is adjustable.

*** Applies under ideal conditions. The water consumption depends on local conditions. Fine adjustments can be made during installation.

**** in accordance with EN 60 335-2-58, §ZAA.2.8 with instruments that satisfy class 1.

Measurements of the sound pressure level on site are performed in three places 1 m from the edges of the front at a height of 1.55 m using a microphone. When measuring sound power level, create an imaginary measurement area consisting of five sides at a distance of 1 m from all edges of the machine.

CONNECTION, MACHINE	
Total connected load (kW)	15 / 18 *
Main fuse (A) ** (400-415V 3N~ 50Hz) & (400V 3~ 50Hz) & (440V 3~ 60Hz)	32
Main fuse (A) ** (230V 3~ 50/60Hz)	50
Main fuse (A) ** (200V 3~ 50/60Hz)	63
Max. connection area Cu (mm ²) *** (400-415V 3N~ 50Hz (L1-L3 N PE)) & (230V 3~ 50/60Hz (L1-L3 PE)) & (400V 3~ 50Hz (L1-L3 PE)) & (440V 3~ 60Hz (L1-L3 PE))	25
Max. connection area Cu (mm ²) *** (200V 3~ 50/60Hz (L1-L3 PE))	35

* option

** Other voltages on request

*** 3-metre-long cable (outside machine) included

WATER, DRAIN AND VENTILATION CONNECTIONS	
Water quality, hardness (°dH)	2–7
Hot water connection 50-65°C (external thread) *	R½"
Cold water connection, 5–12°C (external thread) **	R½"
Waste pipe connection, PP pipe (ø mm)	50
Water capacity, pressure (kPa)	20
Water capacity, flow (litres/min.)	10
Floor drain, capacity (litres/sec.)	3
Heat load to room, latent / sensible / total (kW)	1.3 / 3.6 / 4.9

* With water colder than 50°C, we recommend a 15kW booster heater

** option

SIZE AND WEIGHT FOR TRANSPORT *	
Size (LxWxH) (mm)	1340 x 860 x 1730
Weight (kg)	280 / 295 **

* Including packaging

** option